

SURVEY CHECKLIST: *to be completed on site*****

- All points to be fitted within the recess.
- Intermediate points B/D/F to be at midpoints of their respective sail edges.
- Corner points C/A/E to be on either side of the recess, leaving enough roof space to be able to screw in eye-plates.

Confirmation required for the following:

- Colour of Fabric **SLATE**
- Colour of Fittings **SS**
(Please note white & gold fittings carry a surcharge of £5+VAT per sail corner.)


Required Dims :

Sail 01

AB 1485
 BC 1480
 CD 1990
 DE 1990
 EF 1490
 FA 1480

AD 2240
 BD 1520
 BE 3160
 BF 1970
 FD 1490
 FC 3140

Custom Sail Survey - Option 01

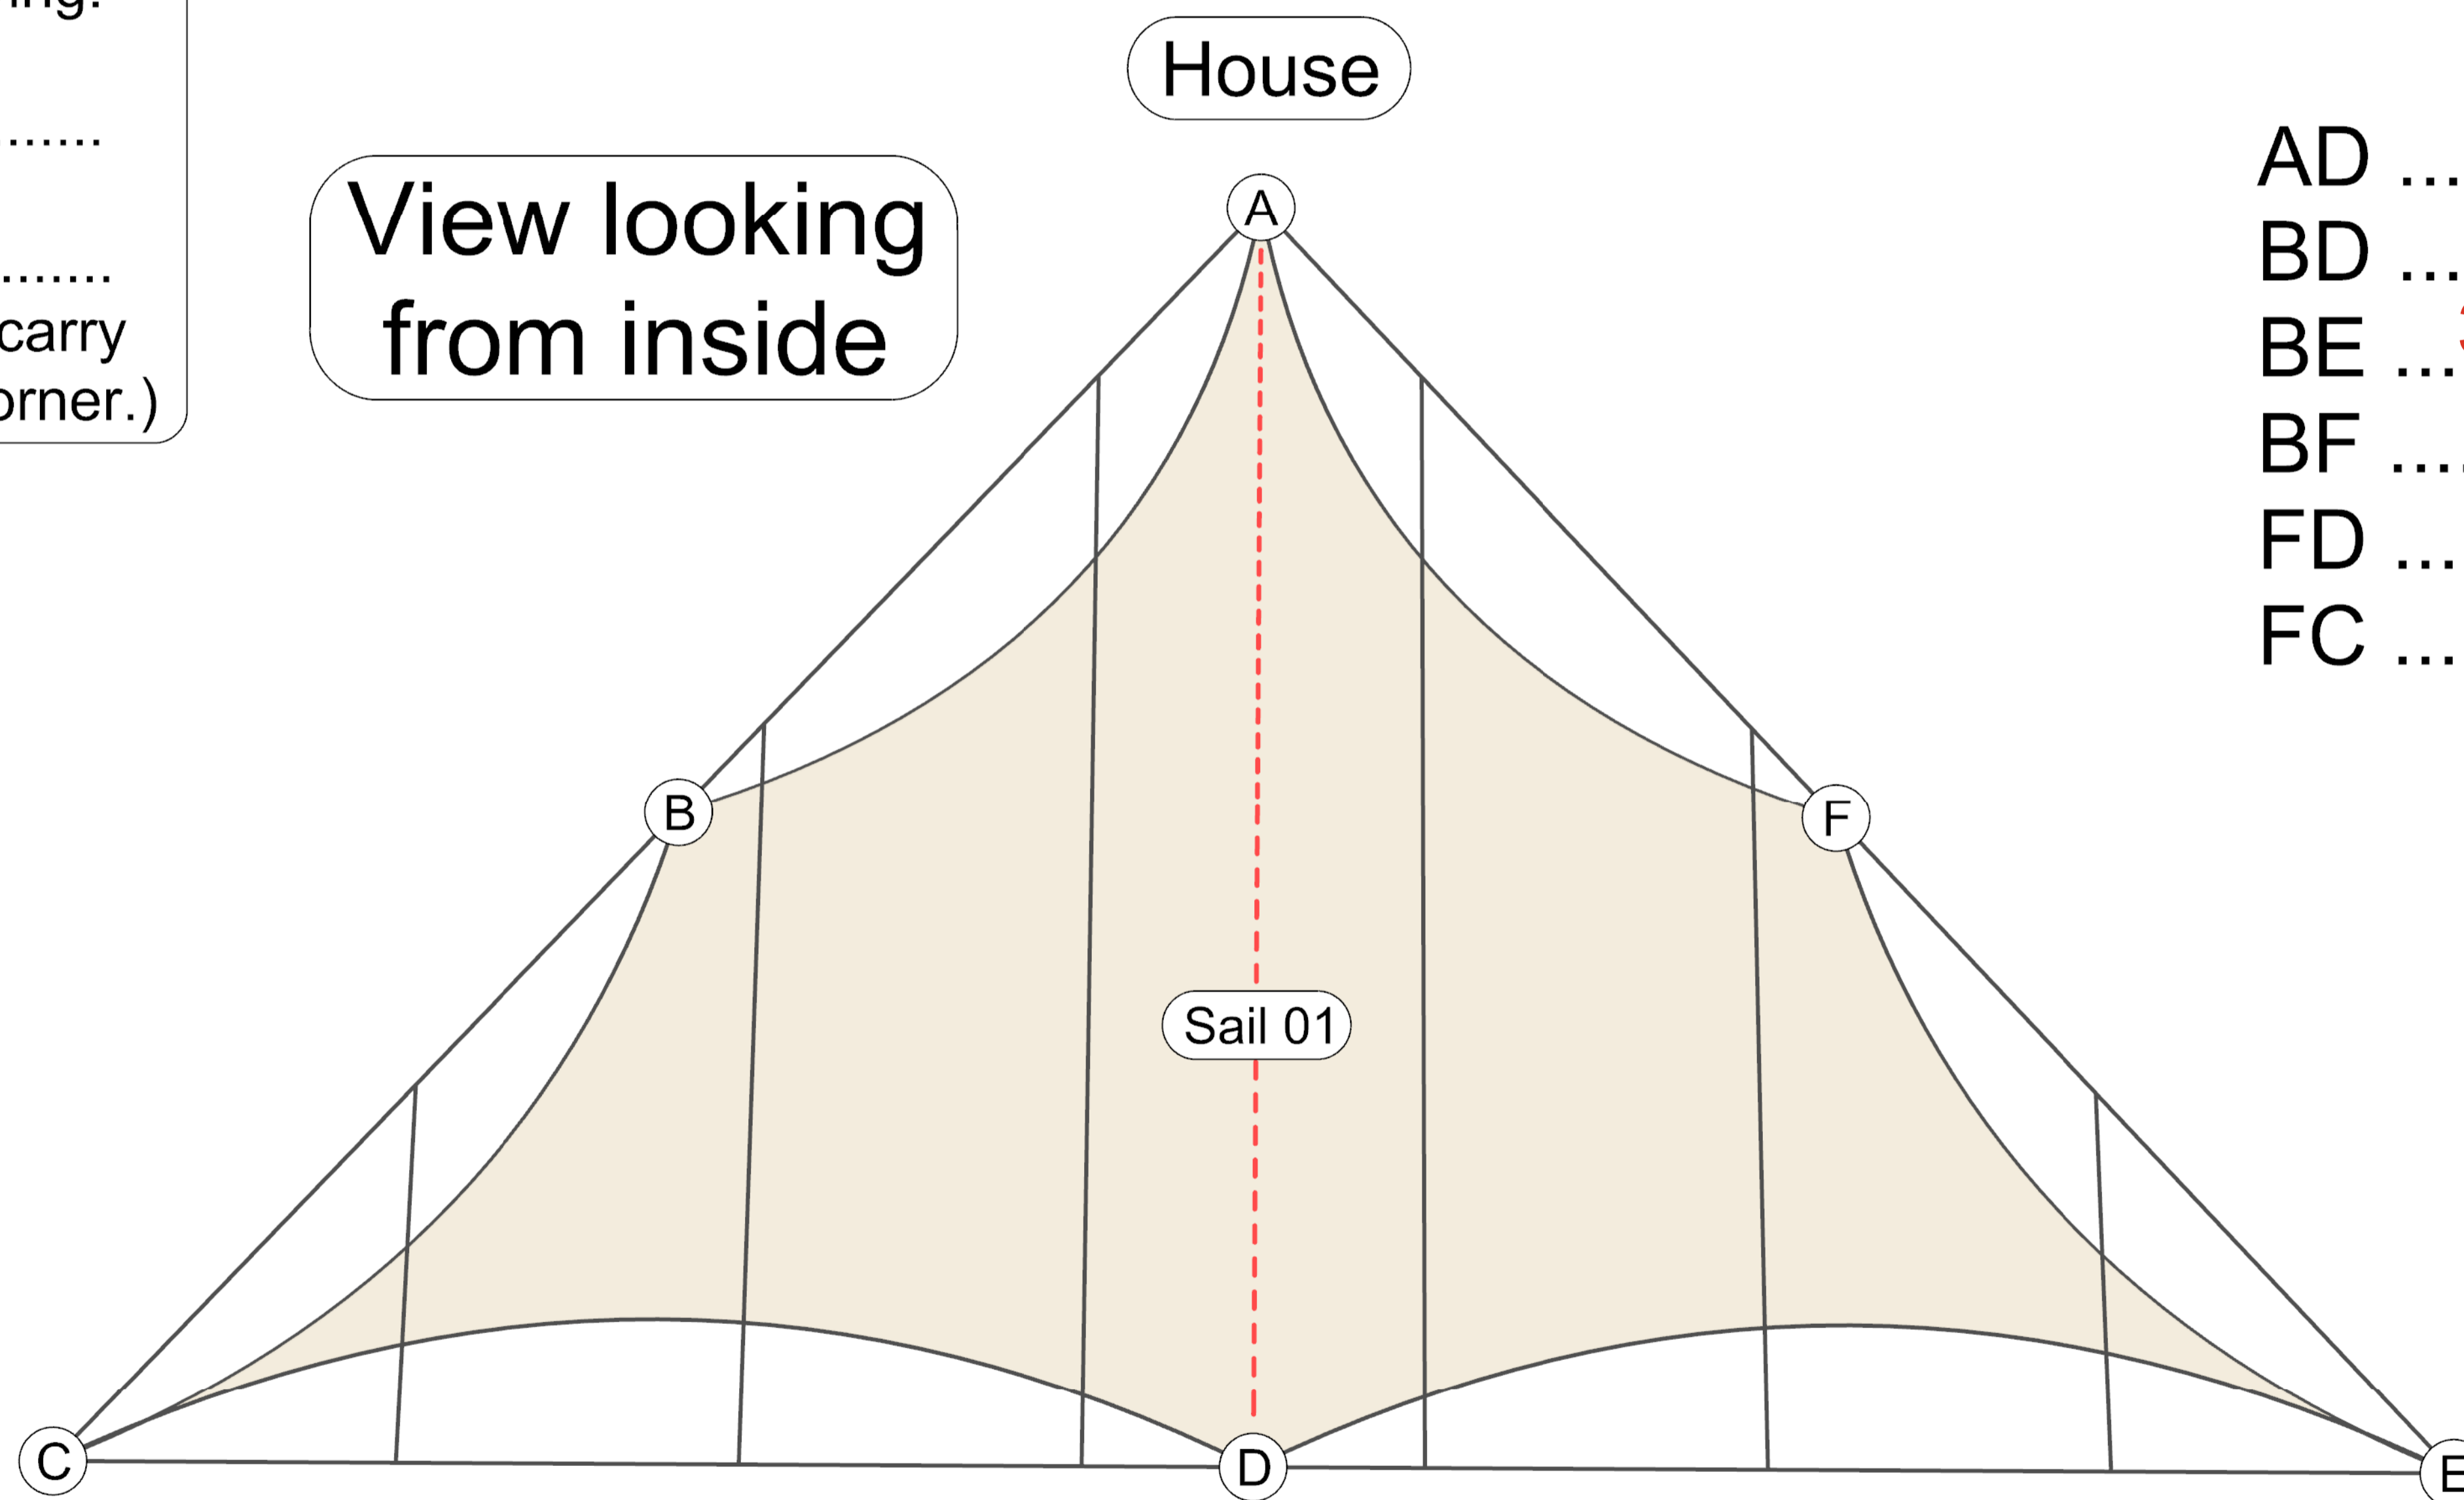

View looking from inside

Notes:					
Survey points to be taken from point on conservatory where eye plates are to be fixed.					
MARK ALL POINTS BEFORE COMMENCING SURVEY					
Dimensions should be taken as accurately as possible ideally +/-5mm					
Design Shows: 1 x Made to Measure InShade Sails - ISX - TBC (Sails are shown in Ivory for design clarity)					
Obstructions: None					
Special Fittings: None					
Structure: Timber					
t : 01786 450083		e : inshade@shadeplus.co.uk			
Project: 71718-10295-Crill					
Date: 11.02.25	Drawn: RD	Check: AB			

