

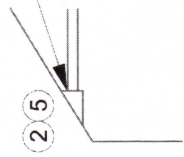


Measure to this point on top of tie bar

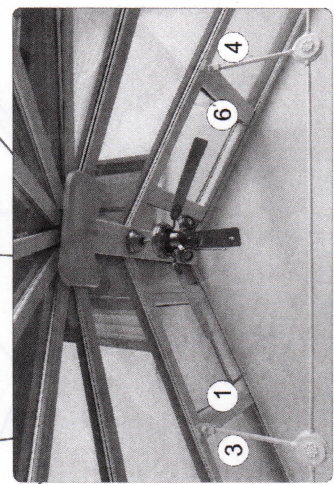

Required Dims :	
Sail 01	Sail 04
AB 1020	AE 205
BC 1155	ES 2280
CD 1480	ST 1475
DE 2290	TU 1160
EA 205	UA 1020
AD 2645	AS 2640
BD 1895	UE 1295
BE 1295	US 885
CE 2300	TE 2305
A1 970	A4 1290
B1 495	S4 1355
C1 1395	T4 1420
E1 930	E5 2080
E2 2030	S5 855
C2 850	T5 865
D2 660	A6 975
C3 1425	U6 490
D3 1360	T6 1385
A3 1295	E6 940

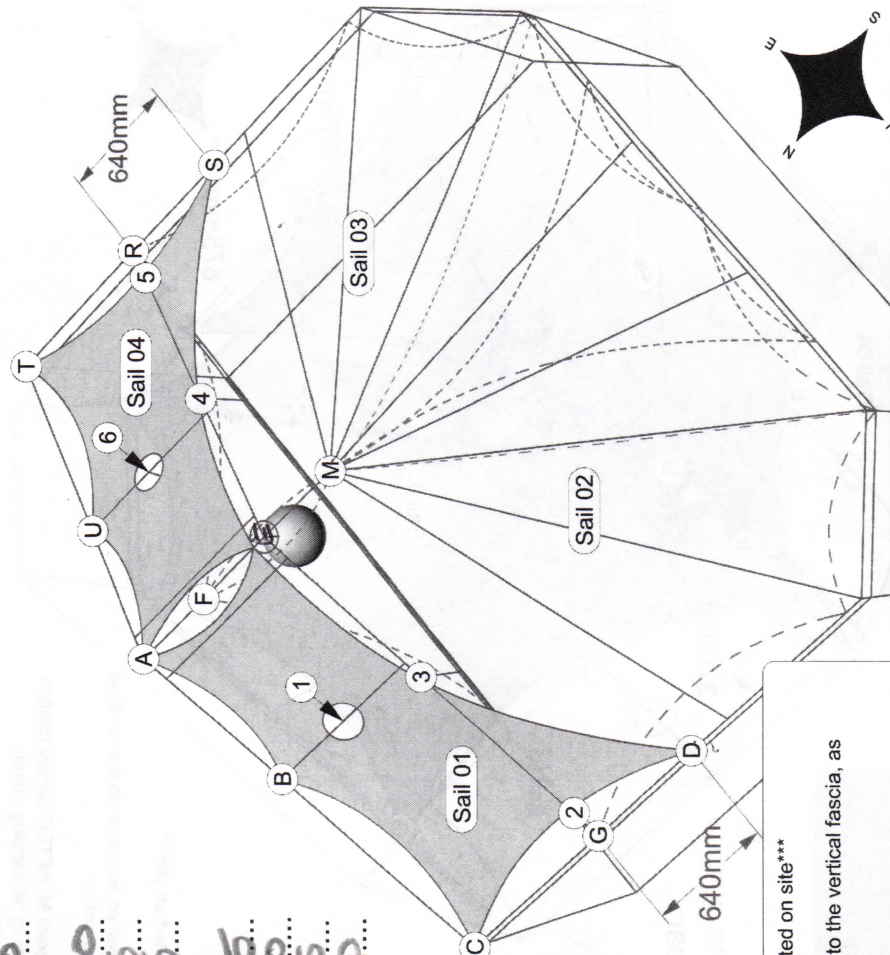

Confirmation required for the following:
 • Colour of Fabric *Solid Ivory*
 • Colour of Fittings *Stainless Steel*

- SURVEY CHECKLIST: ***to be completed on site*****
- All lower fitting points should be fixed to the vertical fascia, as close to the top as possible.
 - Points B/U to be in line with opening vents screws.
 - Point E to be as close to the fan base as possible.
 - Points 1/6 to be taken from the top of the vent opener screw with the window in the closed position as per inset photo.
 - Points 3/4 to be taken from where the Sail edges will pass the vertical tie bar struts. To find this, run a tape from E to D/S and mark where it touches the struts.
- As Drawn:
GD/RS = 640mm.

Notes:	
Survey points to be taken from point on conservatory where eye plates are to be fixed.	
MARK ALL POINTS BEFORE COMMENCING SURVEY	
Dimensions should be taken as accurately as possible ideally +/-5mm	
Any queries regarding this please contact us on 01786 450083	
Design Shows: 4 x Made to Measure InShade Sails - ISX - CTBC (Sails are shown in Ivory for design clarity)	
Obstructions: 2 x Opener, Tie-Bar	
Special Fittings: M10 CPF	
Some sails may require a colour matched seam, this will be confirmed on receipt of final dimensions.	
t : 01786 450083 e : inshade@shadeplus.co.uk	
Project:	72292-7117-Vernon
Date:	19.03.19
Drawn:	CW
Check:	AB