

SURVEY CHECKLIST: *to be completed on site*****

- Points B/A/F/L to be on the ridge with A/F split either side of the bracket. Points S/M to be split on the front corner beams.
- Points C/G/A1/D1 to be at midpoints of roof glazing bars and points K/X to be directly in-line with those.
- All lower fitting points MUST be fixed to the bottom of the vertical fascia, with points P/V fitting to the South facing fascia. Points E/H/J/N/W/Y/Z/B1 to be split either side of the bracket.
- Point E1/F1 to be taken from the vent opener screw with the window in the closed position as per inset photo.
- Points T/R to be set at 450mm away from the glazing panel midpoint or In-line with glazing bars if difference is less than 30mm
- Intermediate points Q/U to be at midpoints of P/R/T/V.

Required Dimns :

Sail 01	Sail 02	Sail 02 cntd.	Sail 03	Sail 04	Sail 05
AB 1450	FH 2490	F-E1 900	MN 2410	ST 1800	LY 2480
BC 1735	HJ 1320	H-E1 2010	NP 1385	TU 1335	YZ 1340
CD 1235	JL 2475	J-E1 2010	PQ 1300	UV 1320	ZF 2455
DE 1442	LF 1340	L-E1 890	QR 1350	VW 1450	FL 1340
EA 2462	FJ 2815	EH 135	RM 1800	WS 2410	FX 2270
AC 1890	FK 2280	JN 135	MP 2745	SU 1915	FY 2795
AD 2850	GJ 2260		MQ 1920	SV 2760	LZ 2820
BE 2880	GK 2465		NQ 1915	TW 3030	L-A1 2285
CE 1800	GL 2270		NR 3005	UW 1945	XZ 2275
	HK 2255				X-A1 2465
	HL 2805				Y-A1 2235

Confirmation required for the following:

- Colour of Fabric
- Colour of Fittings

Notes:

Survey points to be taken from point on conservatory where eye plates are to be fixed.

MARK ALL POINTS BEFORE COMMENCING SURVEY

Dimensions should be taken as accurately as possible ideally +/-5mm

Any queries regarding this please contact us on 01786 450083

Design Shows:
6 x Made to Measure Inshade Sails - ISX - TBC (Sails are shown in Ivory for design clarity)


Obstructions: Opener, Light & Tie-Bar x 2

Special Fittings: Leader Wires


Some sails may require a colour matched seam, this will be confirmed on receipt of final dimensions.

T: 01786 450083
e: inshade@shadepius.co.uk

Project:	8596-Mourant
Date:	11.03.21
Drawn:	AB
Check:	MF

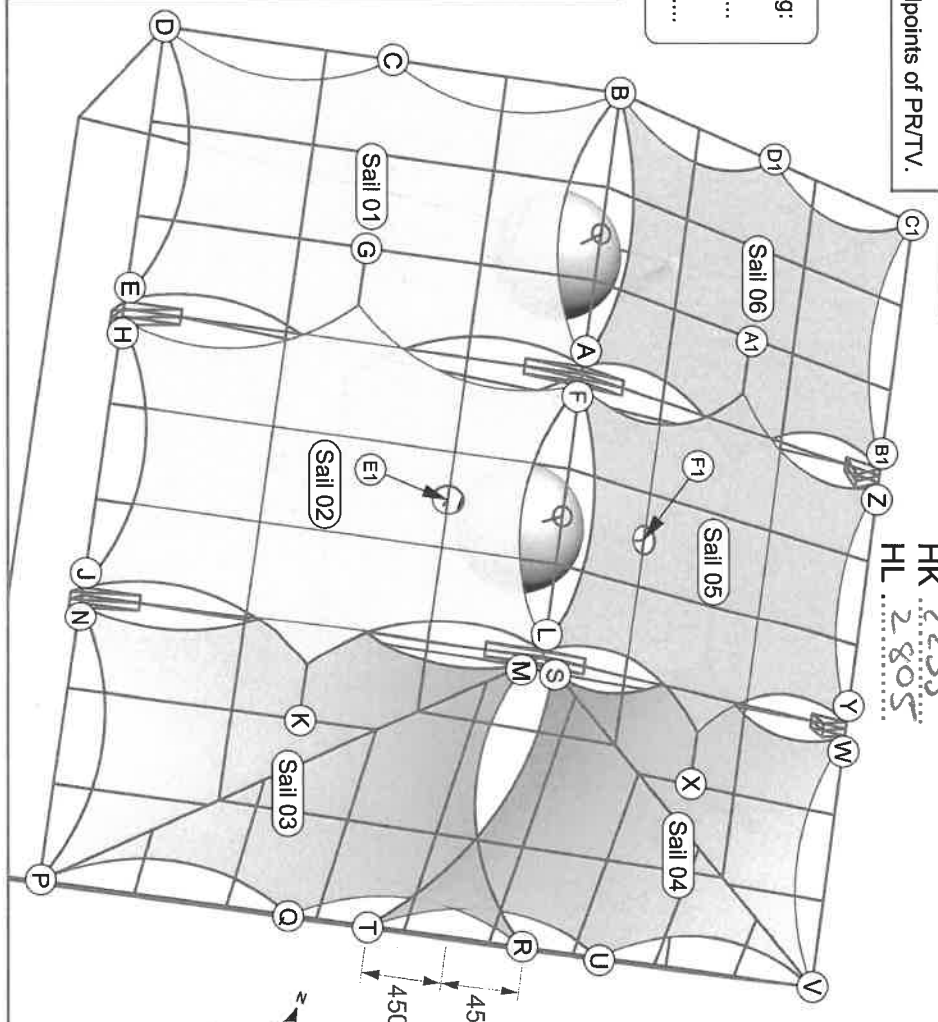

Sail 06	A-B1 2490	F-F1 900
	B1-C1 1455	L-F1 900
	C1-D1 1230	Y-F1 2010
	D1-B 1220	Z-F1 2010
	BA 1450	
	A-C1 2875	
	A-D1 1915	
	B1-D1 1910	
	B1-B 2845	

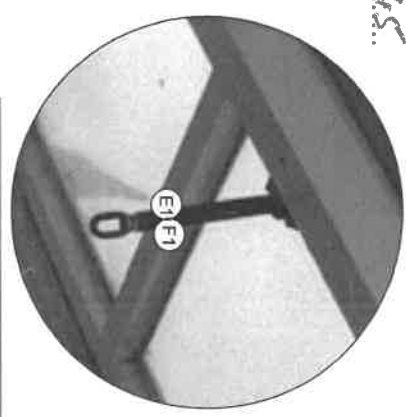


INSTALLATION CHECKLIST *please read before starting*****

- Leader wires at points G/K/X/A1 to be around 250mm long, but shorten if required to achieve the correct amount of coverage.
- Leader wires between points 1 to be around 1000mm long, but shorten if required to achieve the correct amount of coverage.
- Relevant fittings to be placed over the existing letter dots. If letter dots are missing and you are unsure of their correct location, then please get in touch with us and we will try to help using the dimensions taken during the sail survey.
- If supplied screws are wrong size, then use the enclosed spare screw pack to establish appropriate size and call us to arrange delivery of extra screws.

Label denotes Sail ref. and the in-situ position, position label towards the roof.

Fittings Installation - Opt 02

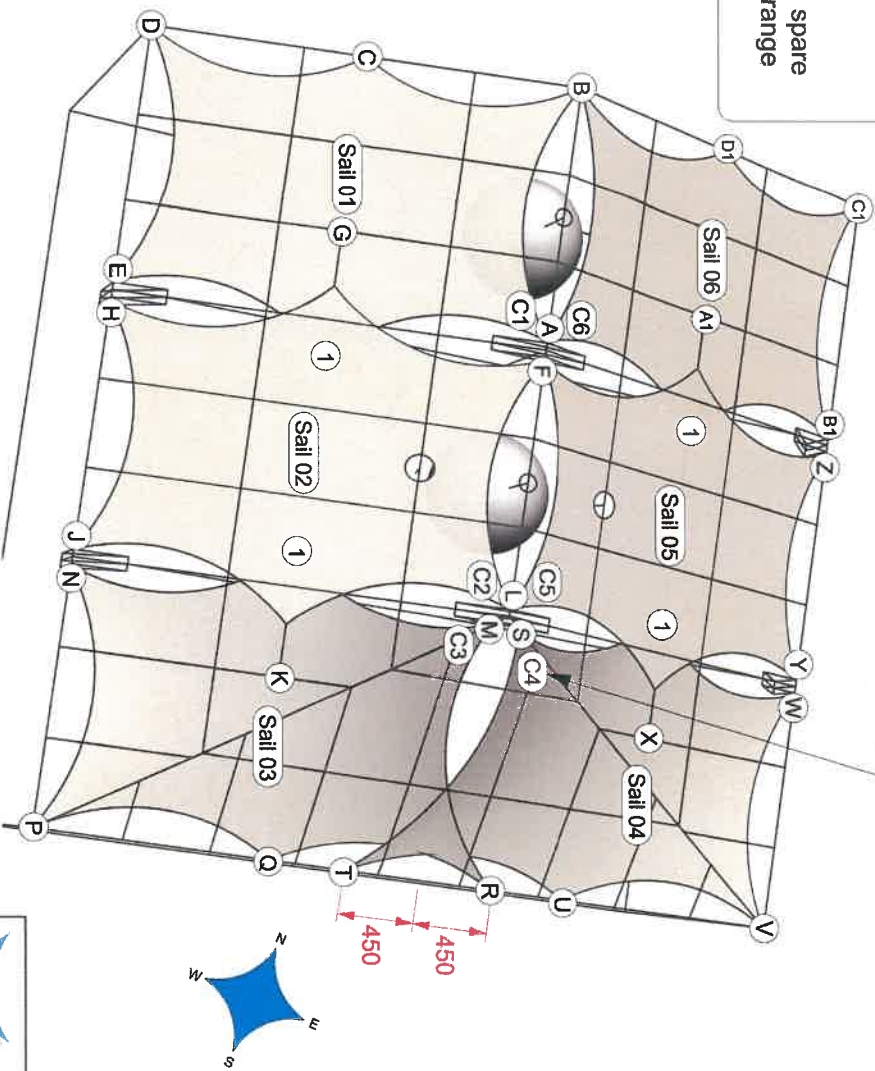

Notes:

Edge curvatures are indicative only and may vary from those of the final product.

Final Design Shows :

6 x Made to Measure InShade Sails - (SX - White (Sails are shown in Ivory for design clarity))

Obstructions: Opener, Light & Tie-Bar x 2

Special Fittings: Leader Wires

Supplied By :



t : 01534 768141

e : info@cpinteriors.ie

Project: 8593-Mourant

Date: 10.03.21

Drawn: AB

Check: -

