




COAT AFTER

Powder

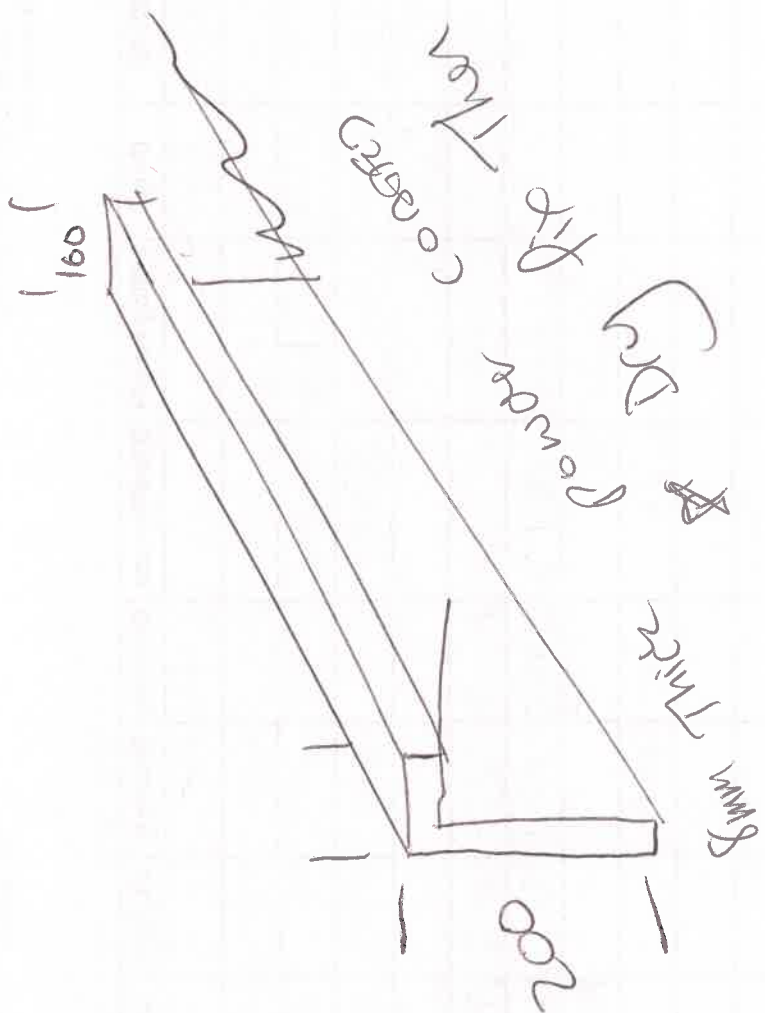

Dry Fit Then

Powder

8mm Thick

200

160