

SURVEY CHECKLIST: *to be completed on site*****

- 8mm Capping Piece to be fitted at point AM, AFTER survey confirm suitability by taking off capping cover and take photo's.
- Points K/J to be set at 350mm away from the glazing bar.
- All lower fitting points should be fixed to the bottom of the vertical fascia.
- Points D/Q to be at midpoints of roof glazing panels.
- Point Y/Z to be taken from the vent opener screw with the window in the closed position as per inset photo.
- Points G/F/N/L/T/S/B/V to be set at 350mm away from the glazing panel midpoint or in-line with glazing bars if difference is less than 30mm.

Confirmation required for the following:

- Colour of Fabric
- Colour of Fittings
- (Please note white & gold fittings carry a surcharge of £2+VAT per sail corner.)

Notes:

Survey points to be taken from point on conservatory where eye plates are to be fixed.
 MARK ALL POINTS BEFORE COMMENCING SURVEY
 Dimensions should be taken as accurately as possible ideally +/-5mm
 Design Shows:
 6 x Made to Measure InShade Sails - ISX - TBC
 (Sails are shown in Ivory for design clarity)
 Obstructions: 2 x Opener, Box Gutter & Tie-Bar
 Special Fittings: 2 x M8 CPF


t : 01786 450083 e : inshade@inshadeplus.co.uk

Project: 72292-9183-Stewart

Date: 03.03.22 Drawn: AB Check: PB

Required Dimms :

Sail 01	AB 1505	AG 1565	KH 1585	MN 1560	MT 1505	Sail 06
BC 1730	GH 1770	HL 1760	NP 1700	TU 1770	UV 1765	
CD 1330	HJ 1565	LM 1565	PQ 1350	UK 1520	VA 1500	
DE 1355	JA 1680	MK 1670	QR 1325	KM 1675	AJ 1680	
EF 1700	AH 2005	KL 2615	RS 1715			
FA 1565	GJ 2610	HM 1995	SM 1500	MU 1950	JV 2570	
AC 1925			MP 1960	TK 2580	UA 1960	
AD 1465			MQ 1470	MY 1270	AZ 1255	
AE 1955			MR 1920	TY 1435	JZ 1210	
DF 2215			QS 2200	UY 680	UZ 700	
DB 2215			QN 2215	KY 1225	VZ 1420	

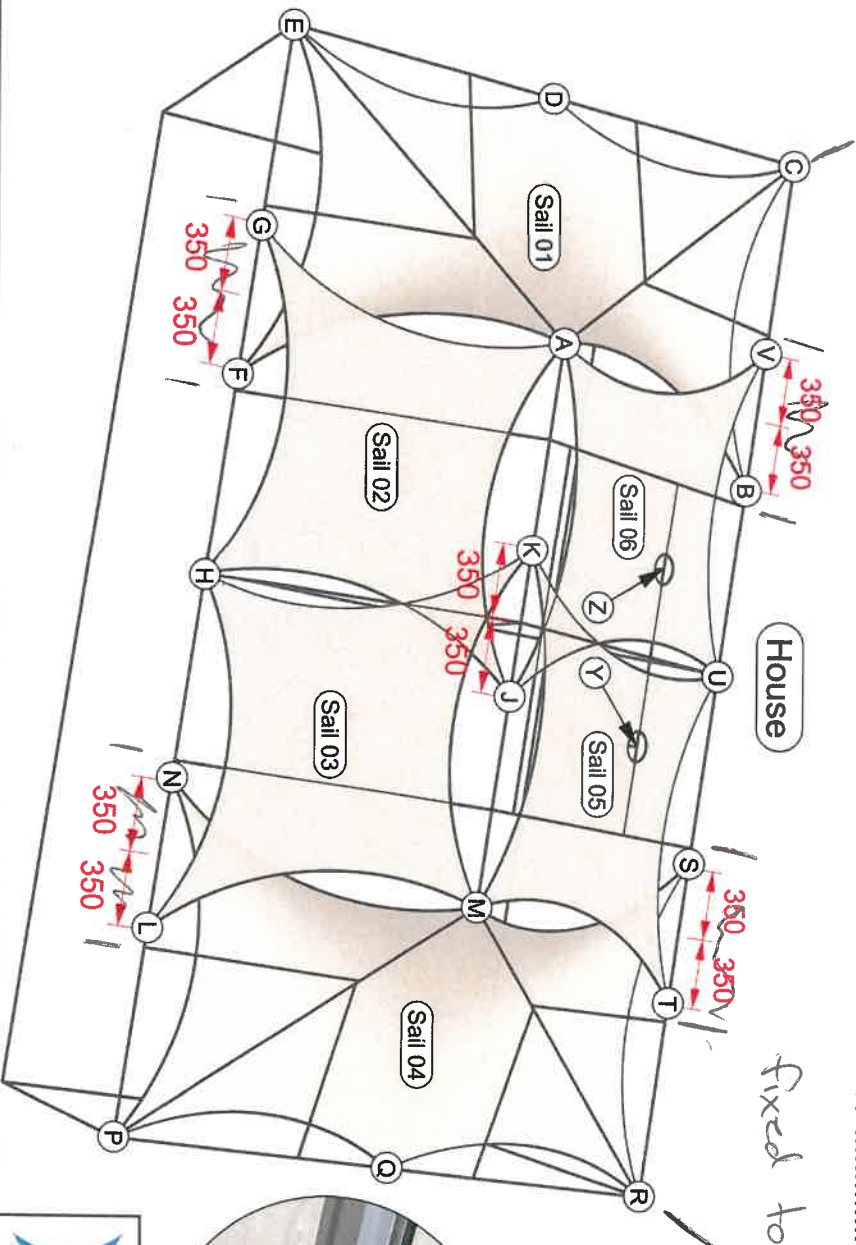

Fixed to roof Bars

Custom Sail Survey - Option 01

