


SURVEY CHECKLIST: *to be completed on site*****

- Point A1/A2 to be on the underside of the ridge split either side of the centre - check with client how much room they require for the fan or light fitting. Measure A1-A2 mm.
- All lower fitting points should be fixed to the vertical fascia at mid height with corner points C/F/J/M on the South/North fascia.
- Points E/D/L/K to be set at 290mm away from the glazing bar.
- Points H/G/B/N to be set at 360mm away from the central glazing panel midpoint.

Required Dims :

Sail 01	Sail 02	Sail 03	Sail 04
A1-B	A1-E	A2-H	A2-L
BC	EF	HJ	LM
CD	FG	JK	MN
D-A1	G-A1	K-A2	N-A2
BD	EG	HK	A2-M
A1-C	A1-F	A2-J	LN

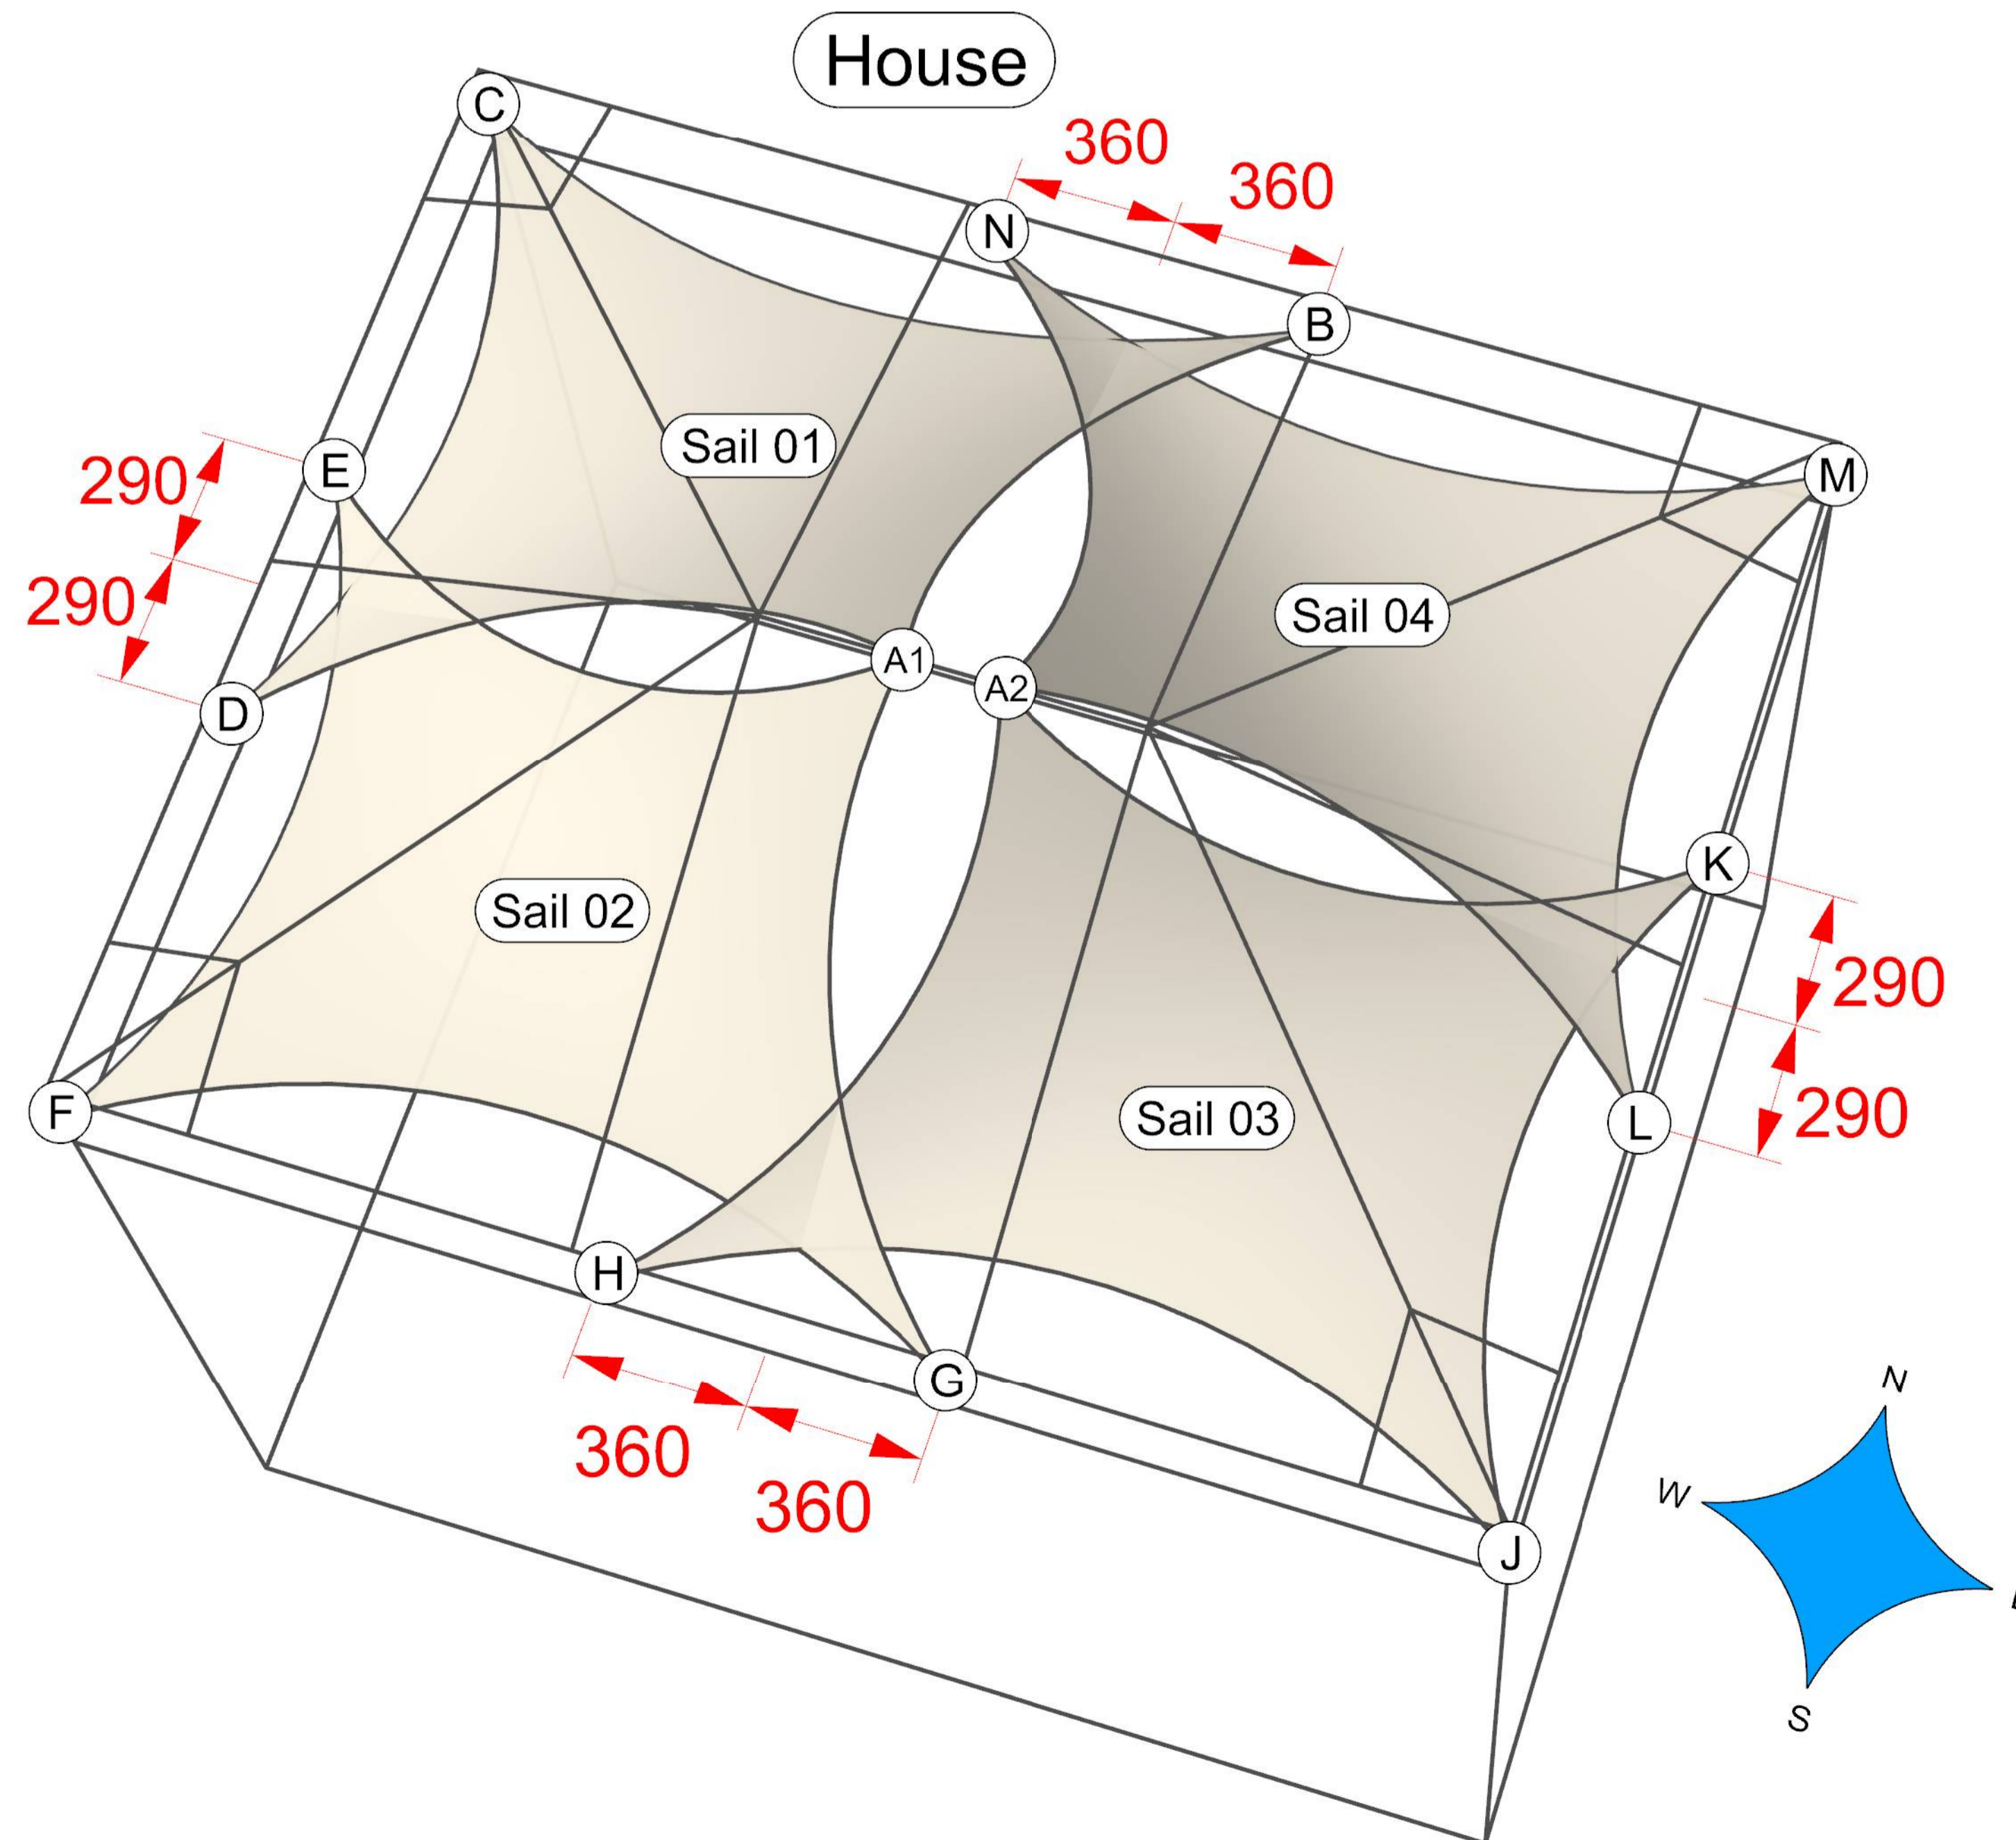

Confirmation required for the following:

- Colour of Fabric
 - Colour of Fittings
- (Please note white & gold fittings carry a surcharge of £2+VAT per sail corner.)

Notes:

Survey points to be taken from point on conservatory where eye plates are to be fixed.

MARK ALL POINTS BEFORE COMMENCING SURVEY

Dimensions should be taken as accurately as possible ideally +/-5mm

Design Shows:
4 x Made to Measure InShade Sails - ISX - TBC
(Sails are shown in Ivory for design clarity)

Obstructions: Light/Fan Wire Centre of Ridge

Special Fittings: HPS Lower Fittings

t : 01786 450083 e : inshade@shadeplus.co.uk

Project: 72292-9225-Wood

Date: 26.04.22 Drawn: AB Check: LW

