

**SURVEY CHECKLIST: \*\*\*to be completed on site\*\*\***

- Point A1/A2 to be on the underside of the ridge split either side of the centre - check with client how much room they require for the fan or light fitting. Measure A1-A2 ..... mm.
- All lower fitting points should be fixed to the vertical fascia at mid height with corner points C/F/J/M on the South/North fascia.
- Points E/D/L/K to be set at 290mm away from the glazing bar.
- Points H/G/B/N to be set at 360mm away from the central glazing panel midpoint.

**Required Dims :**

Sail 01	Sail 02	Sail 03	Sail 04
A1-B 1405	A1-E 1565	A2-H 1410	A2-L 1370
BC 1835	EF 1470	HJ 1845	LM 1470
CD 1470	FG 1835	JK 1470	MN 1840
D-A1 1570	G-A1 1410	K-A2 1570	N-A2 1410
BD 2390	EG 2385	HK 2385	A2-M 1910
A1-C 1920	A1-F 1920	A2-J 1915	LN 2390

Custom Sail Survey - Option 01

**Confirmation required for the following:**

- Colour of Fabric .....
  - Colour of Fittings .....
- (Please note white & gold fittings carry a surcharge of £2+VAT per sail corner.)

**Notes:**

Survey points to be taken from point on conservatory where eye plates are to be fixed.

**MARK ALL POINTS BEFORE COMMENCING SURVEY**

Dimensions should be taken as accurately as possible ideally +/-5mm

Design Shows:  
4 x Made to Measure InShade Sails - ISX - TBC  
(Sails are shown in Ivory for design clarity)


Obstructions: Light/Fan Wire Centre of Ridge

Special Fittings: HPS Lower Fittings

t : 01786 450083 e : inshade@shadeplus.co.uk

Project: 72292-9225-Wood

Date: 26.04.22 Drawn: AB Check: LW

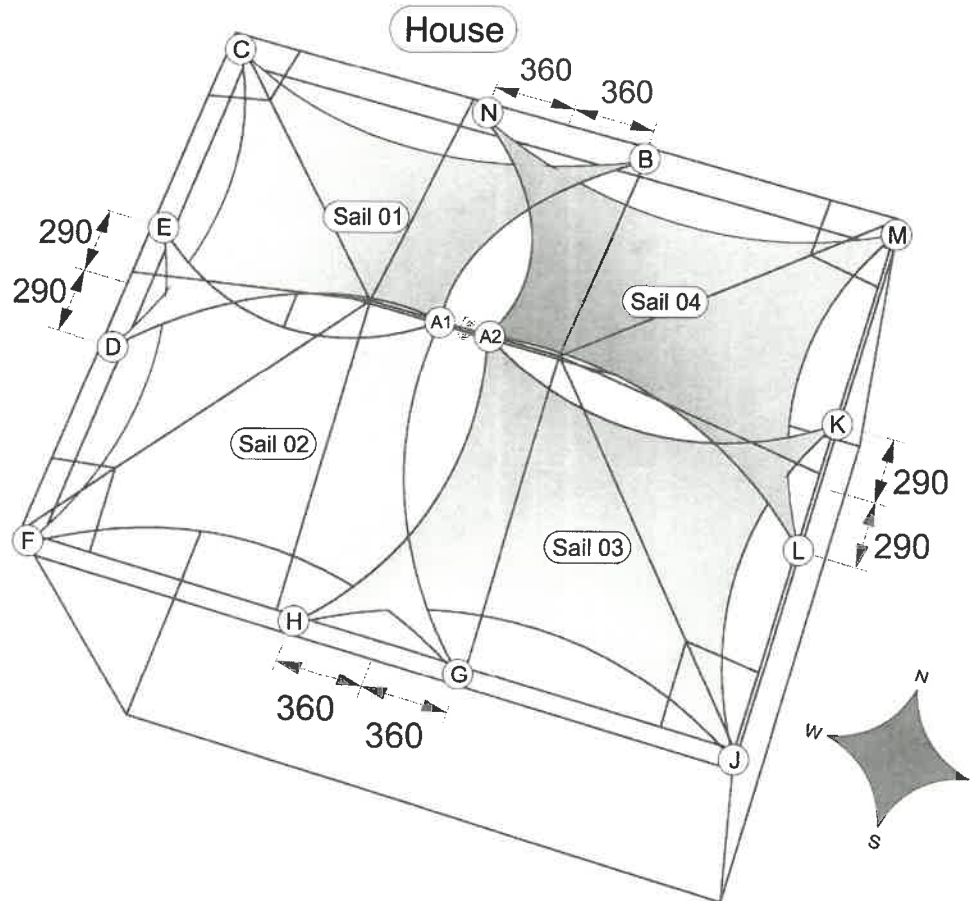

5013033  
WOOD

