

SURVEY CHECKLIST: *to be completed on site*****

- All top fittings to be on the ridge, with A/L/G/M 40mm away from brackets allow room for fitting.
- Lower points C/K/J/S/X/P/U/A1/Z/D1 should be fixed to the bottom of the vertical fascia and 40mm away from brackets to allow room for fitting
- Lower points D/R/Q/W/V/C1 should be fixed to the bottom of the underside roof glazing bars, 30mm up from the point where the glazing bar meets the fascia.
- Intermediate points E/B/H/T/Y/B1 to be at midpoints of their respective sail edges on the underside of roof glazing bars.
- Point Z1/Y1 to be taken from the vent opener screw with the window in the closed position as per inset photo.
- Points X/P to be set at 275mm away from the front central glazing panel midpoint or in-line with glazing bars if difference is less than 30mm.

Required Dims :



Sail 01	Sail 02	Sail 03	Sail 04	Sail 05	Sail 06
AB	GH	NP	NX	GT	AY
BC	HJ	PQ	XW	T-A1	Y-D1
CD	JK	QR	WV	A1-Z	D1-C1
DE	KB	RS	VU	ZY	C1-B1
EF	BL	SH	UT	YL	B1-F
FA	LG	HM	TM	LG	FA
		MN	MN		
BF	BG			YG	YF
BE	BH	NQ	NW	YT	Y-B1
BD	BJ	NR	NV	Y-A1	Y-C1
EA	HL	NS	NU	TL	B1-A
EC	HK	NH	NT	TZ	B1-D1
		HR	TV		
		RP	VX		
		RM	VM		
		QS	WU		
		SP	UX		

Opener Dims :

L-Z1
G-Z1
B-Z1
H-Z1
L-Y1
G-Y1
T-Y1
Y-Y1

Confirmation required for the following:

- Colour of Fabric
 - Colour of Fittings
- (Please note white & gold fittings carry a surcharge of £2+VAT per sail corner.)

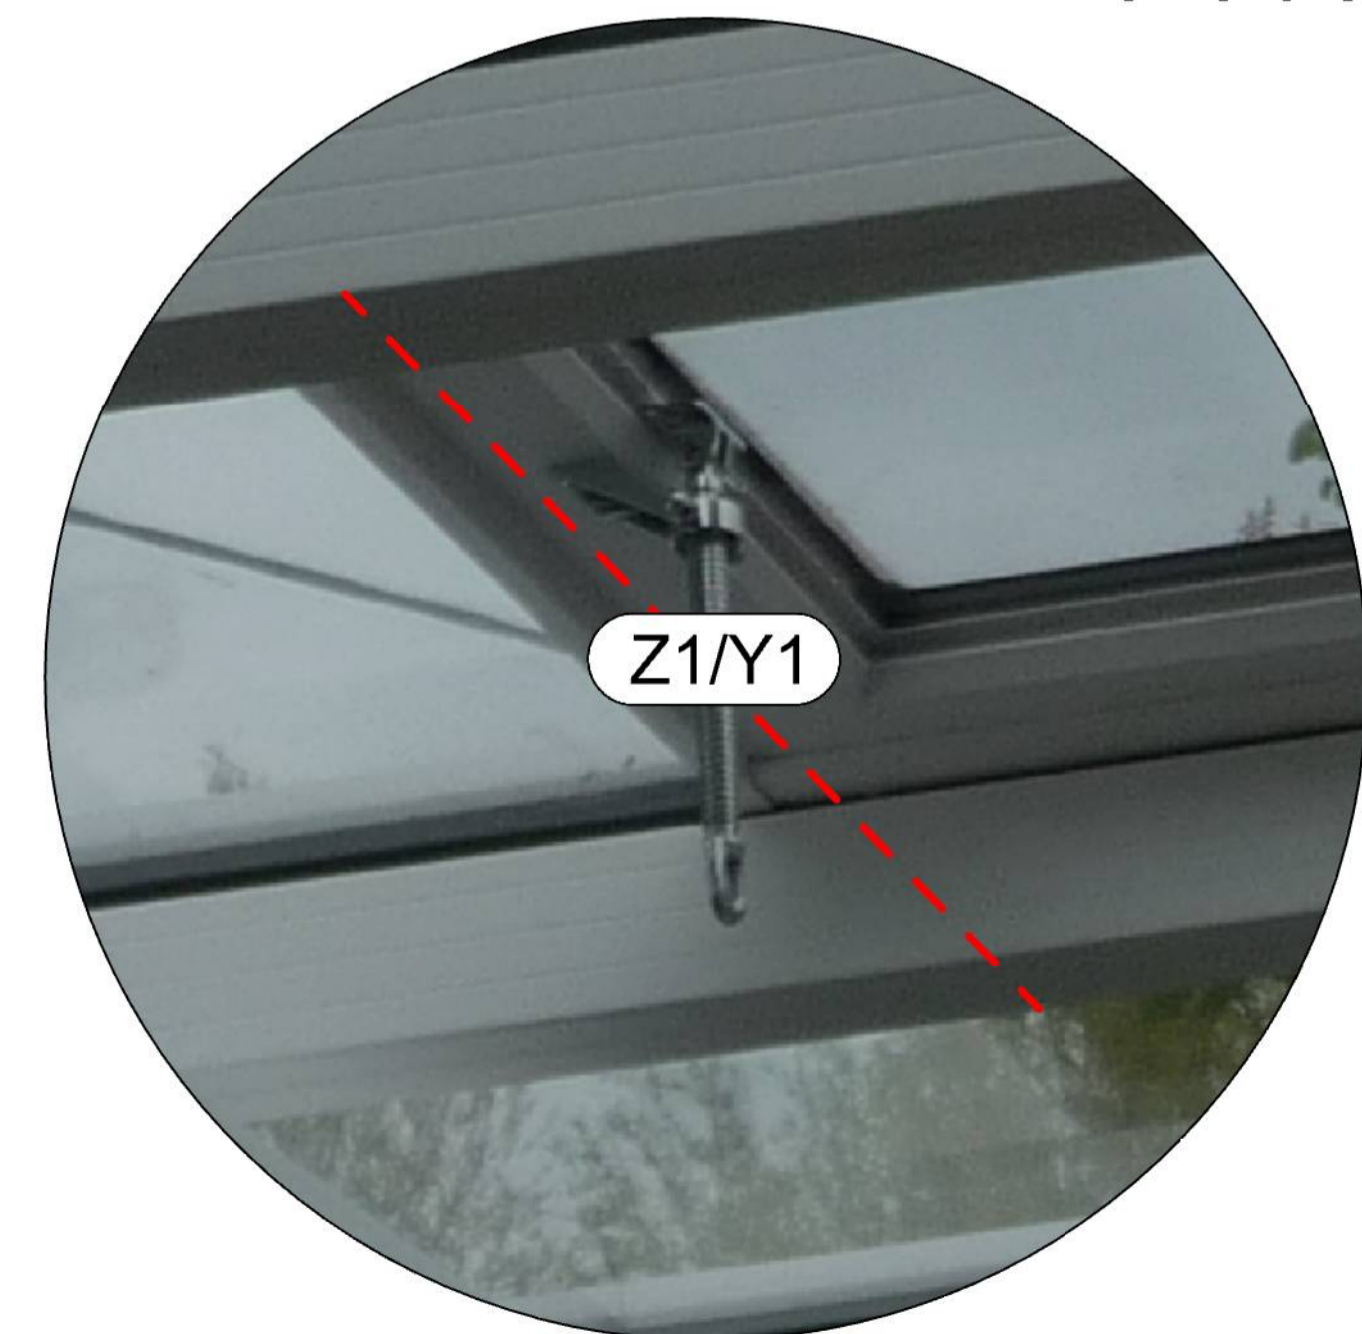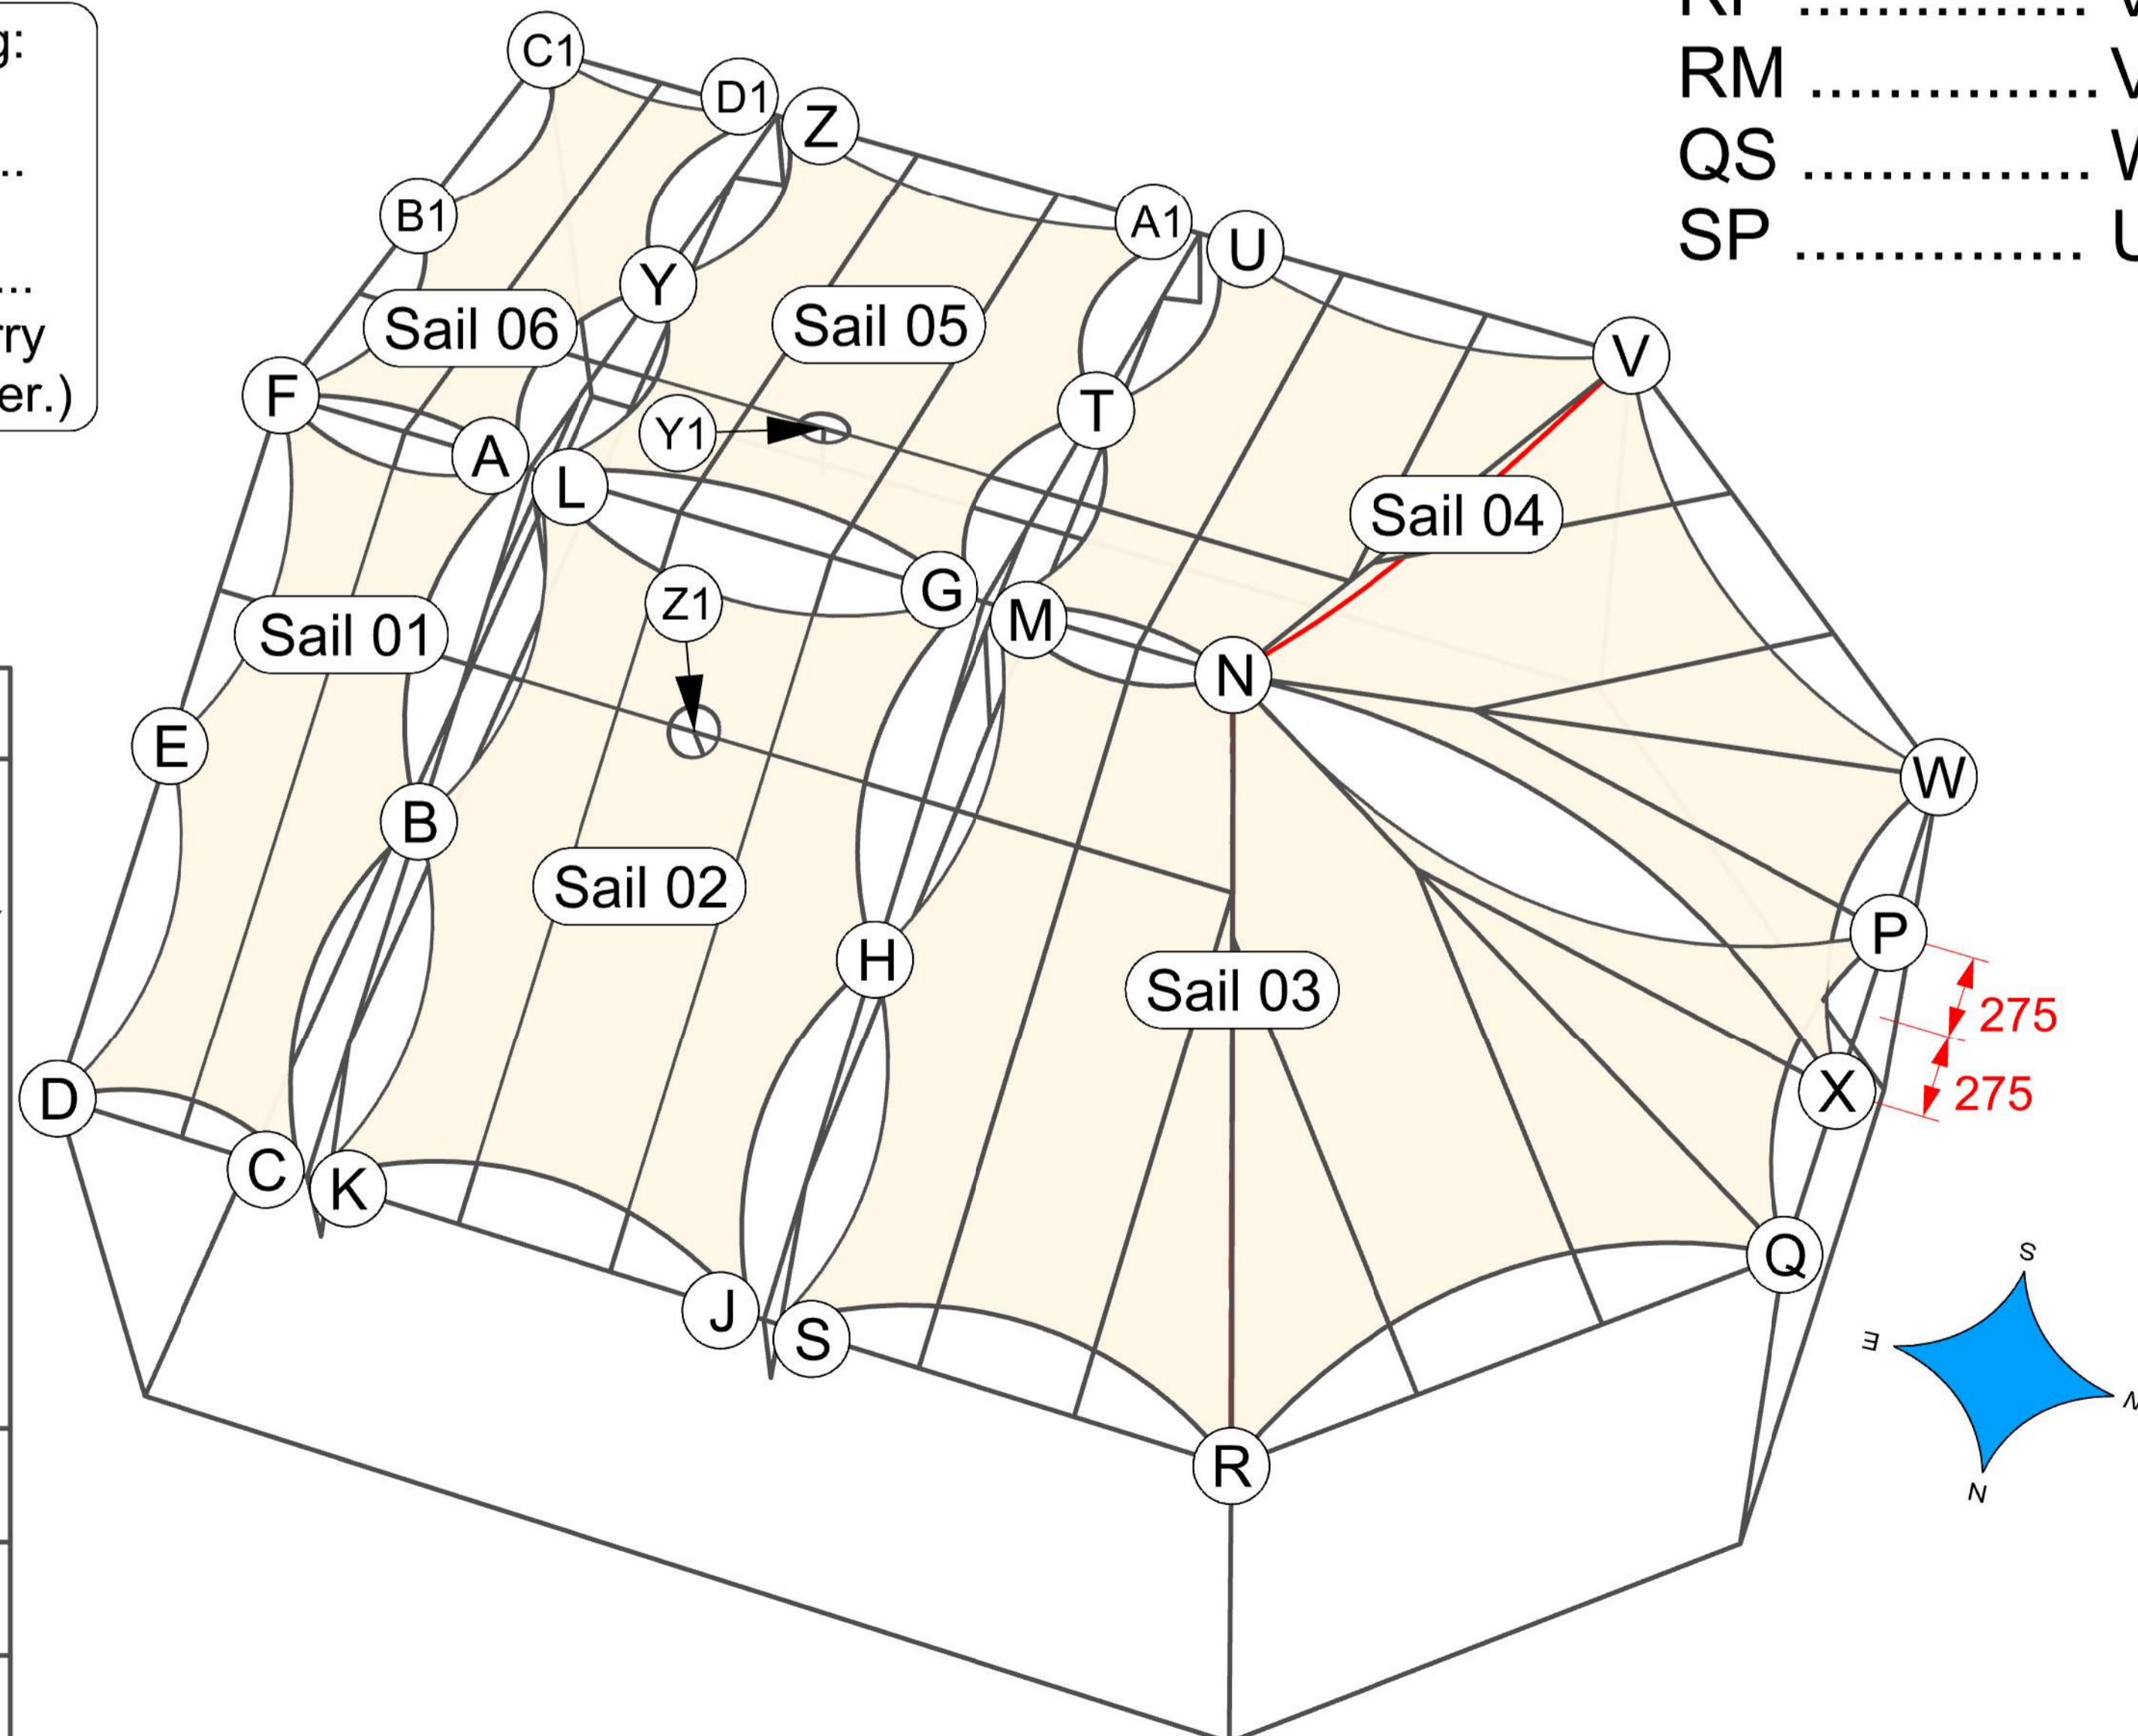

Notes:

Survey points to be taken from point on conservatory where eye plates are to be fixed.

MARK ALL POINTS BEFORE COMMENCING SURVEY

Dimensions should be taken as accurately as possible ideally +/-5mm

Design Shows:
6 x Made to Measure InShade Sails - ISX - TBC
(Sails are shown in Ivory for design clarity)

Obstructions: Tie-bars

Special Fittings: None

t : 01786 450083 e : inshade@shadeplus.co.uk

Project: 72292-9358-Whitsey

Date: 22/06/22 Drawn: LW Check: AB