



Office

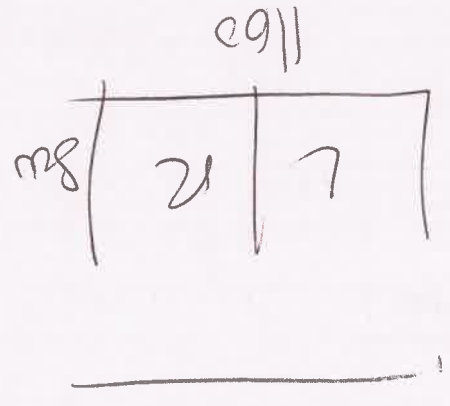

0.2 LR




LN

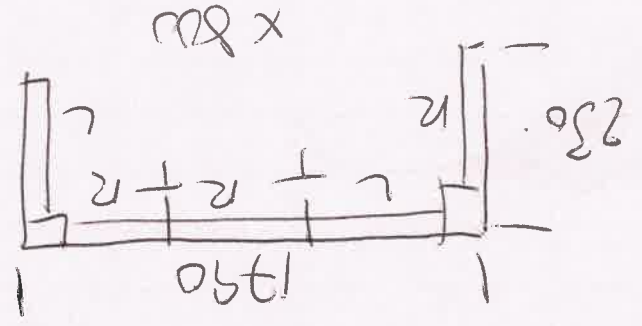

T1 = 600
T2 = 1195

RECTRTRCRL

Bed

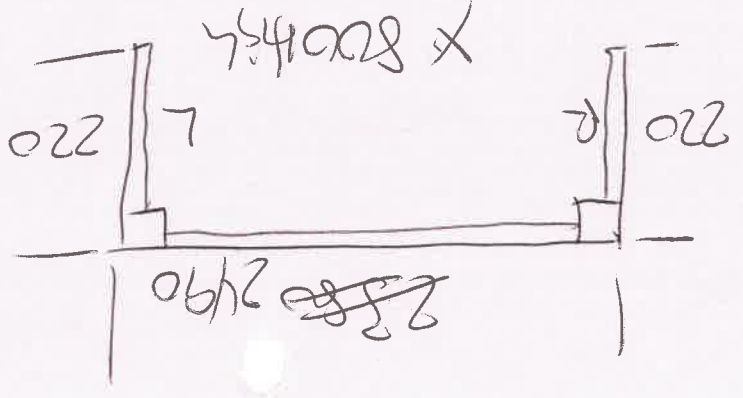

T1 = 600
T2 = 1880

RECT₁LR₂RCL

T-Post

Build at 800

down