


Use existing hedges to block edge

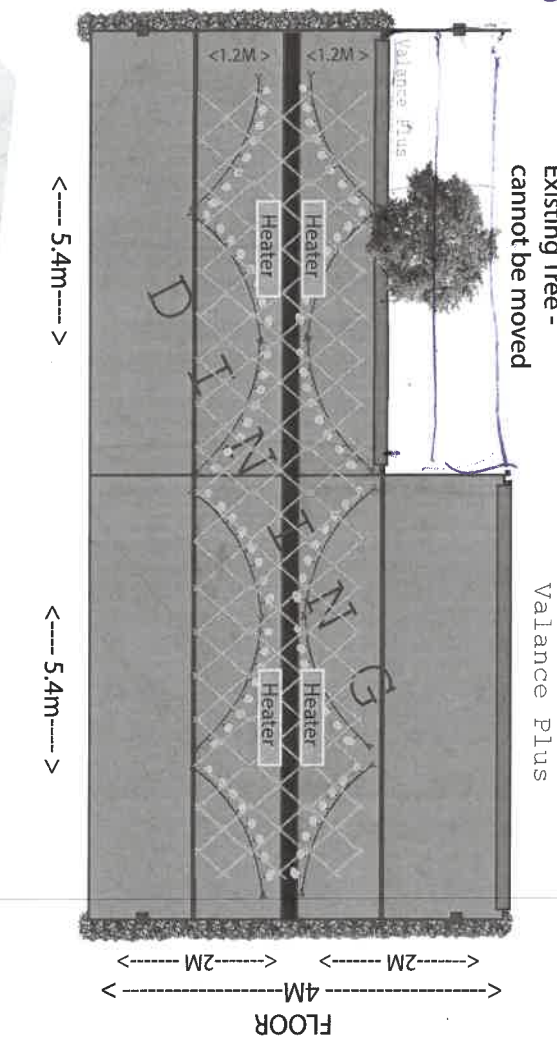

FLOOR

clear 200mm wide (off road) pieces
to cover in one
over gap in channels also



- Have corner stripes to ends of seats
 - Tilt end caps
 - Measure corner gap for the cover to be made.
- Temp fit clear plastic in corner to create rain cover.



BAR LEVANTE

5.6