

SURVEY CHECKLIST: *to be completed on site*****

- Tie Bar Clamp to be fitted at point A. Position sticky dot on the vertical strut 30mm down from the top where the strut meets the capping piece cover.
- Point B to be on the house wall, 20mm below the ridge.
- All lower fitting points should be fixed to the top of the vertical fascia.
- Point Z to be taken from the vent opener screw with the window in the closed position as per inset photo.
- Points E/D/K/L/H/G to be set at 600mm away from the centreline of glazing bar.



Required Dims :


Sail 01	Sail 02	Sail 03
AB	AE	AH
BC	EF	HJ
CD	FG	JK
DA	GA	KA
BD	EG	HK
AC	AF	AJ
AZ	AX	AY
BZ	EX	KY
CZ	FX	JY
DZ	CX	MY
	DX	LY

Sail 04

AL
LM
MB
BA
AM
LB

Confirmation required for the following:

- Colour of Fabric
 - Colour of Fittings
- (Please note white & gold fittings carry a surcharge of £5+VAT per sail corner.)

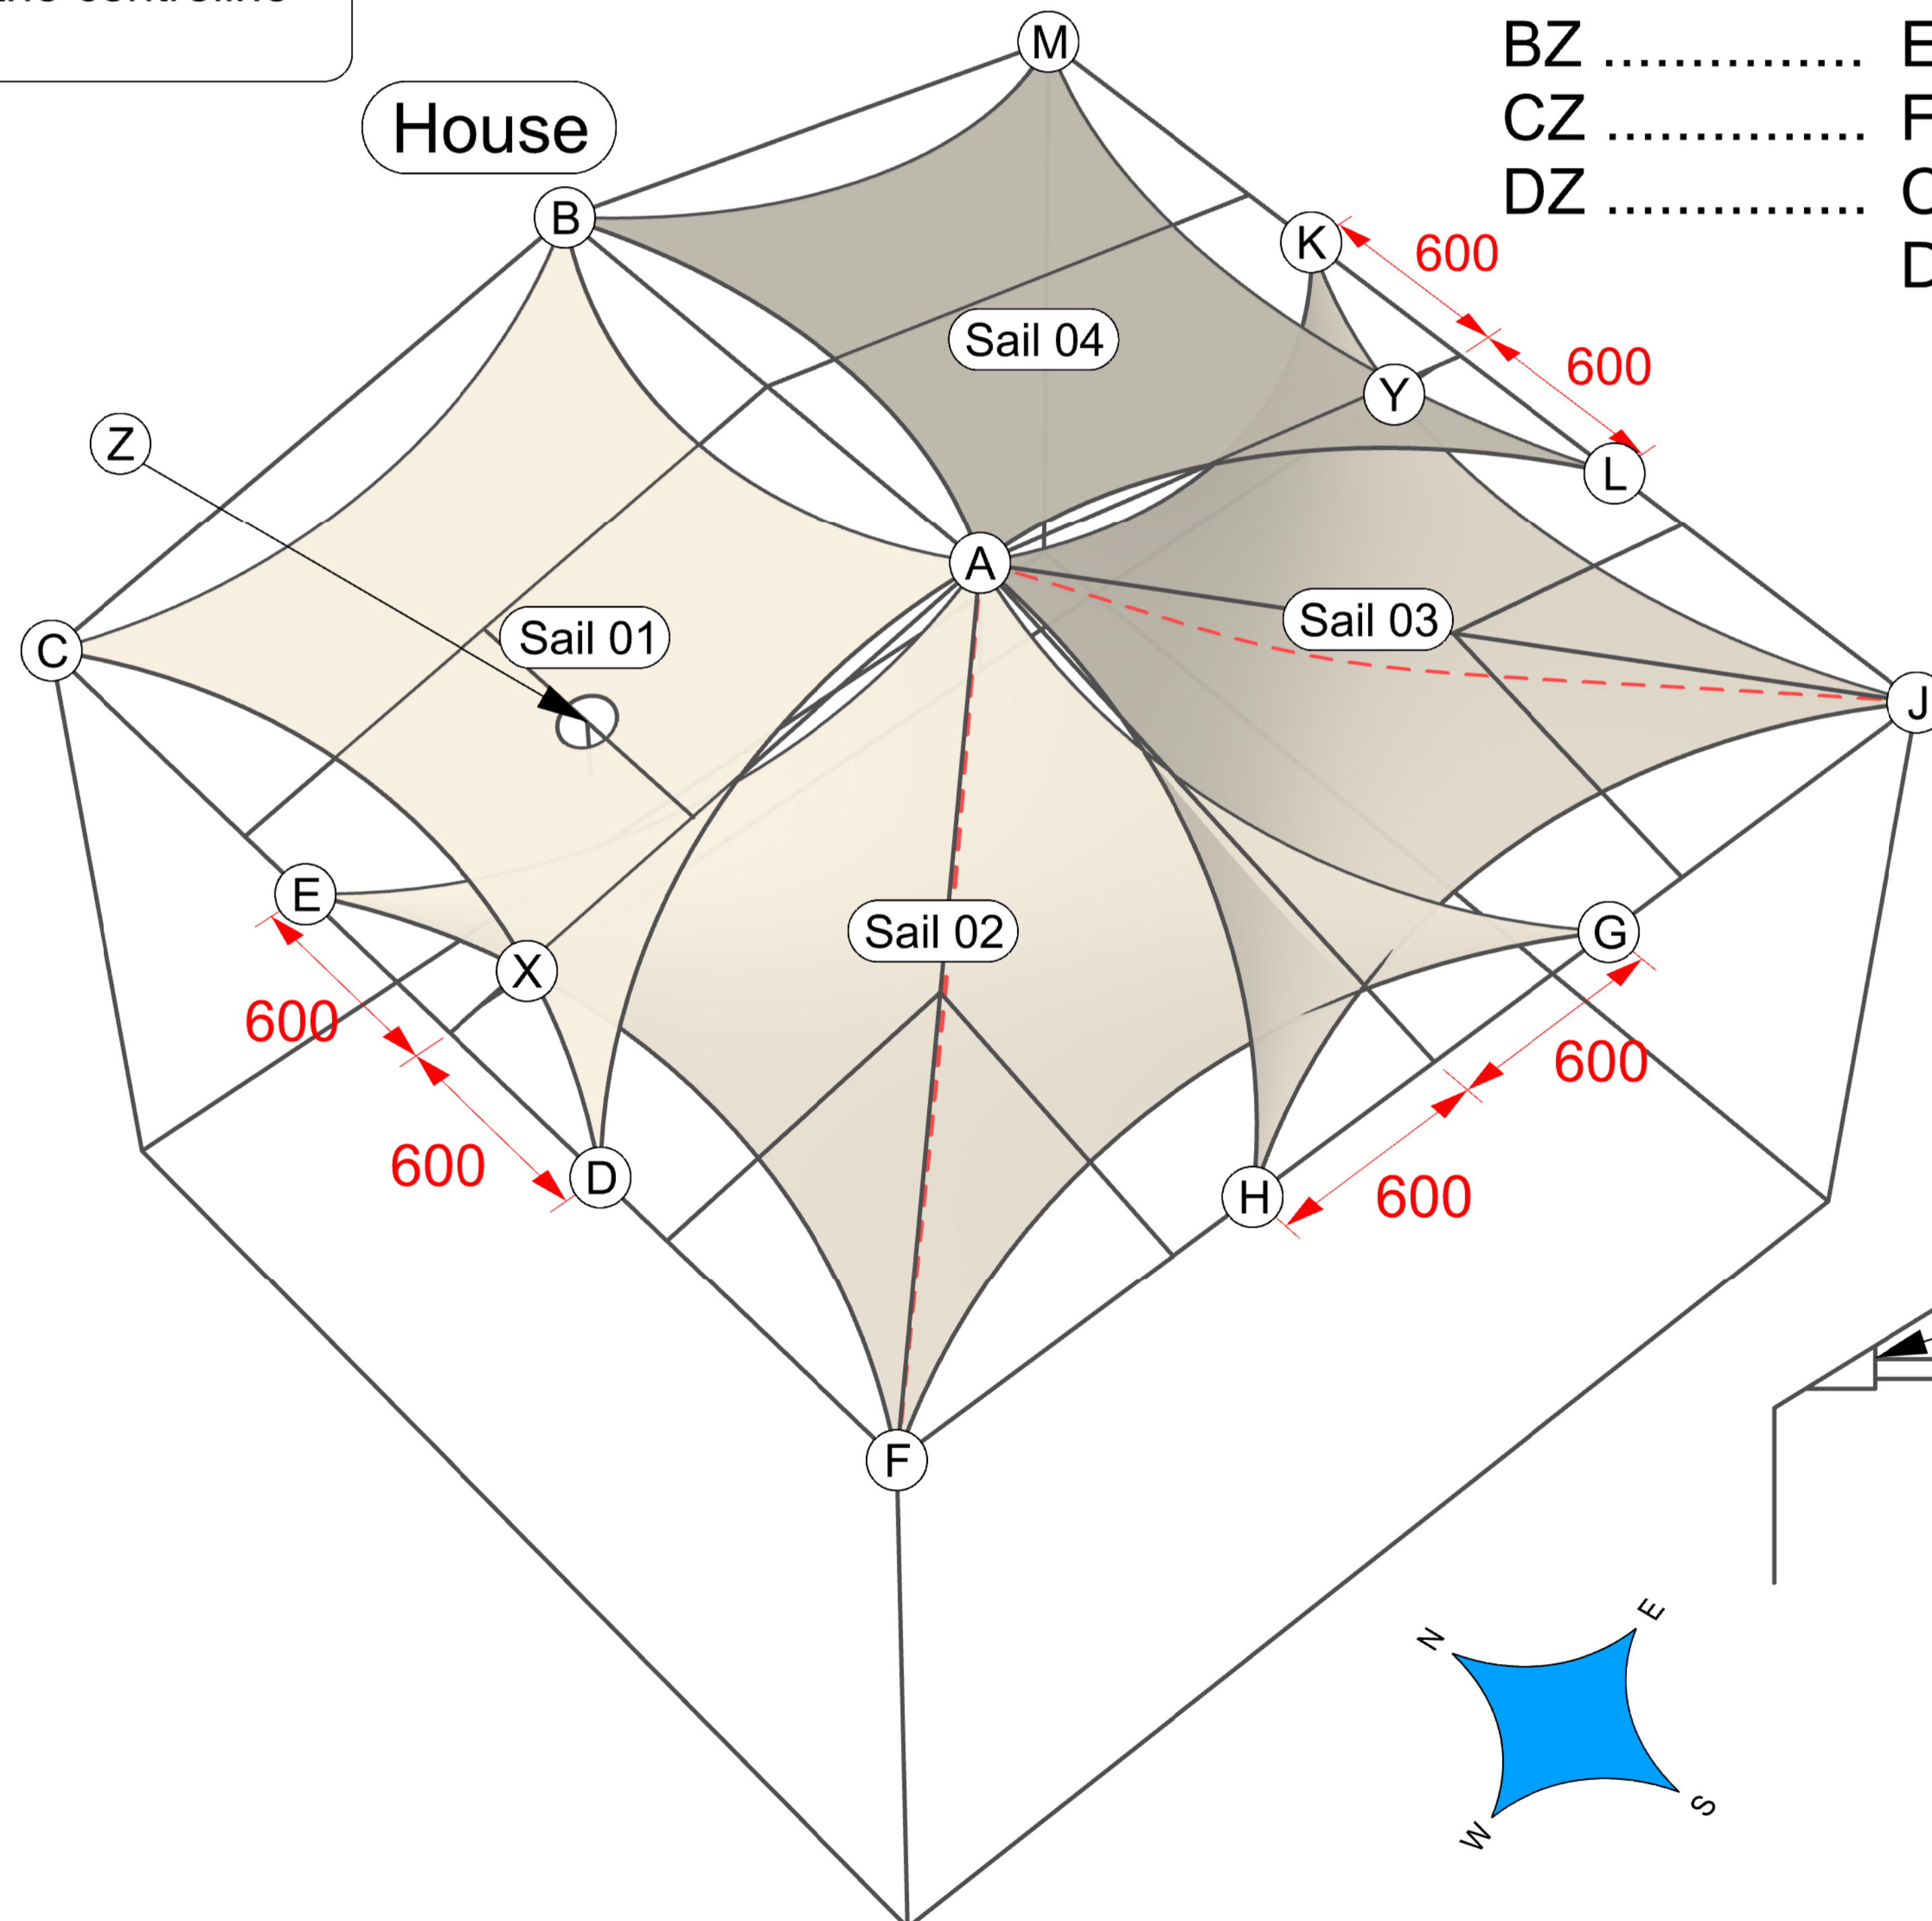

Notes:

Survey points to be taken from point on conservatory where eye plates are to be fixed.

MARK ALL POINTS BEFORE COMMENCING SURVEY

Dimensions should be taken as accurately as possible ideally +/-5mm

Design Shows:
4 x Made to Measure InShade Sails - ISX - Oyster
(Sails are shown in Ivory for design clarity)

Obstructions: Opener & Tie-Bar

Special Fittings: Tie-Bar Clamp, White HPS Fittings

Structure: UPVC

t : 01786 450083 e : inshade@shadeplus.co.uk

Project: 72292-10145-Chittenden

Date: 04.06.24 Drawn: RD Check: AB

