

SURVEY CHECKLIST: *to be completed on site*****

- Tie Bar Clamp to be fitted at point A. Position sticky dot on the vertical strut 30mm down from the top where the strut meets the capping piece cover.
- Point B to be on the house wall, 20mm below the ridge.
- All lower fitting points should be fixed to the top of the vertical fascia.
- Point Z to be taken from the vent opener screw with the window in the closed position as per inset photo.
- Points E/D/K/L/H/G to be set at 600mm away from the centreline of glazing bar.




Required Dims :

Sail 01	Sail 02	Sail 03
AB 1660	AE 1855	AH 1770
BC 1765	EF 2185	HJ 2305
CD 2200	FG 2305	JK 2185
DA 1855	GA 1770	KA 1855
BD 2870	EG 3215	HK 3215
AC 2365	AF 2345	AJ 2345
AZ 1075	AX 1550	AY 1550
BZ 1600	EX 640	KY 640
CZ 1420	FX 1595	JY 1595
DZ 1285	CX 1610	MY 1610
	DX 640	LY 640

Custom Sail Survey - Option 01

Confirmation required for the following:

- Colour of Fabric
- Colour of Fittings
- (Please note white & gold fittings carry a surcharge of £5+VAT per sail corner.)

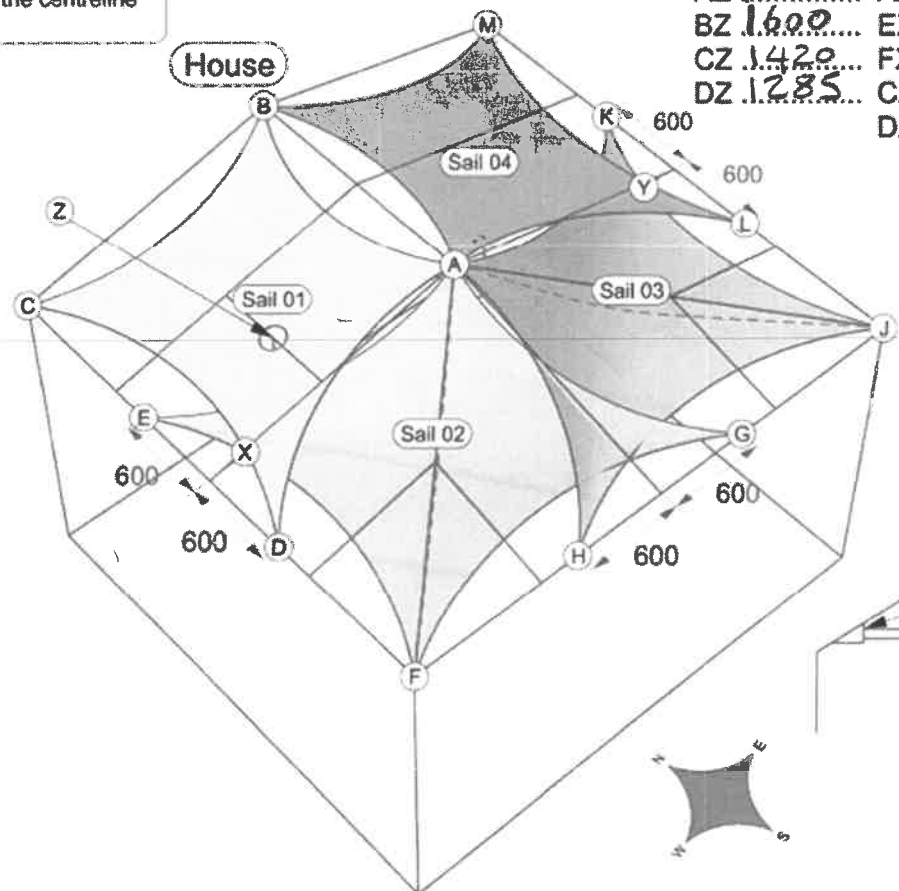

Sail 04
AL 1855
LM 2200
MB 1765
BA 1660
AM 2365
LB 2870

Measure X, Y to this point on top of tie bar

Notes:

Survey points to be taken from point on conservatory where eye plates are to be fixed

MARK ALL POINTS BEFORE COMMENCING SURVEY

Dimensions should be taken as accurately as possible ideally +/-5mm

Design Shows
4 x Made to Measure InShade Bars - ISX - Oyster (Sails are shown in Ivory for design clarity)

Obstructions: Opener & Tie-Bar

Special Fittings: Tie-Bar Clamp, White NPS Fittings

Structure: UPVC

t. 01786 450083 e. inshade@shaceplus.co.uk

Project: 72292-10145-Chittenden

Date: 04.06.24 Drawn: RD Check: AB

