



## Calibration of the Blinds

Wake the hand set up by pressing the **On** key. The opening screen will show the last group that was selected to operate. Press and hold the **m** (menu access) key and the menu appears.




```
Cal.*Setup*View
m=sel E ok
```

With the cursor on Cal, press the “**E and stop**” keys together.




```
*Cal. Blind:01
+- select then E
```

Select the blind number to be calibrated by pressing the **+** or **-** keys, then press “**E**” to confirm.

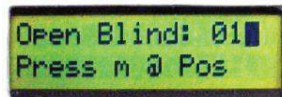


```
Open Blind: 01
Press m @ Pos
```

Follow the instruction on the screen by pressing the “**Open**” key. When the motor stops running move the head of the blind to the required open position. Once the head of the blind has been set in position press the **close** key to close the blind slightly, press the **stop** key then press the **open** key until the blind is fully open. Press the “**m**” key to start the calibration.

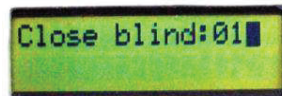


```
Close blind:01
```

Follow the instruction on the screen by pressing the **Close** key.

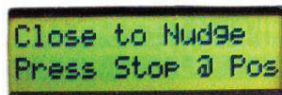


```
Close to Nudge
Press Stop @ Pos
```

When the blind has almost reached the fully closed position press the **close** key again and the blind will stop. By repeated pressing of the close key the blind can be nudged up to the fully closed position. When the blind is at the fully closed position press the **stop** key.

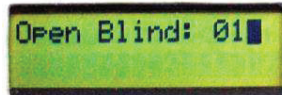


```
Open Blind: 01
```

Press the **open** key to bring the blind back to the fully open position.

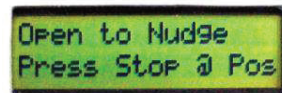

```
Open to Nudge
Press Stop @ Pos
```

When the motor stops press the **stop** key. There is no need to use the nudge facility at this point.

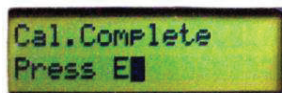

```
Cal.Complete
Press E
```

Press the **E** key to end calibration and return to the opening screen. Repeat the calibration process for all blinds. Once calibrated the blinds will need to be configured into their groups before they can be operated.