Custom Sail Survey - Option 02

SURVEY CHECKLIST: ***to be completed on site***

- □ Tie Bar Clamp to be fitted at point A. Position sticky dot on the vertical strut 30mm down from the top.
- □ Points B/S/E/F/G/P to be on the roof glazing bars. B/S on the top, E on the bottom and G/P at midpoints.
- □ Measure distance at point F as per inset photo ..... mm. If less than 33mm, then move point onto the horizontal tie-bar strut as shown.
- □ Point C/D to be on the house wall.
- □ Point H to be on the corner of the box out as per photo.
- □ Other lower fitting points should be fixed to the top of the vertical fascia, with points J/M on the East facing fascia.
- □ Points L/K to be set at 400mm away from the glazing bar.

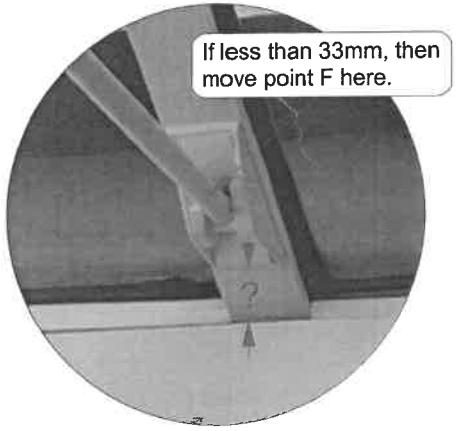

Confirmation required for the following:

- Colour of Fabric .....
- Colour of Fittings .....

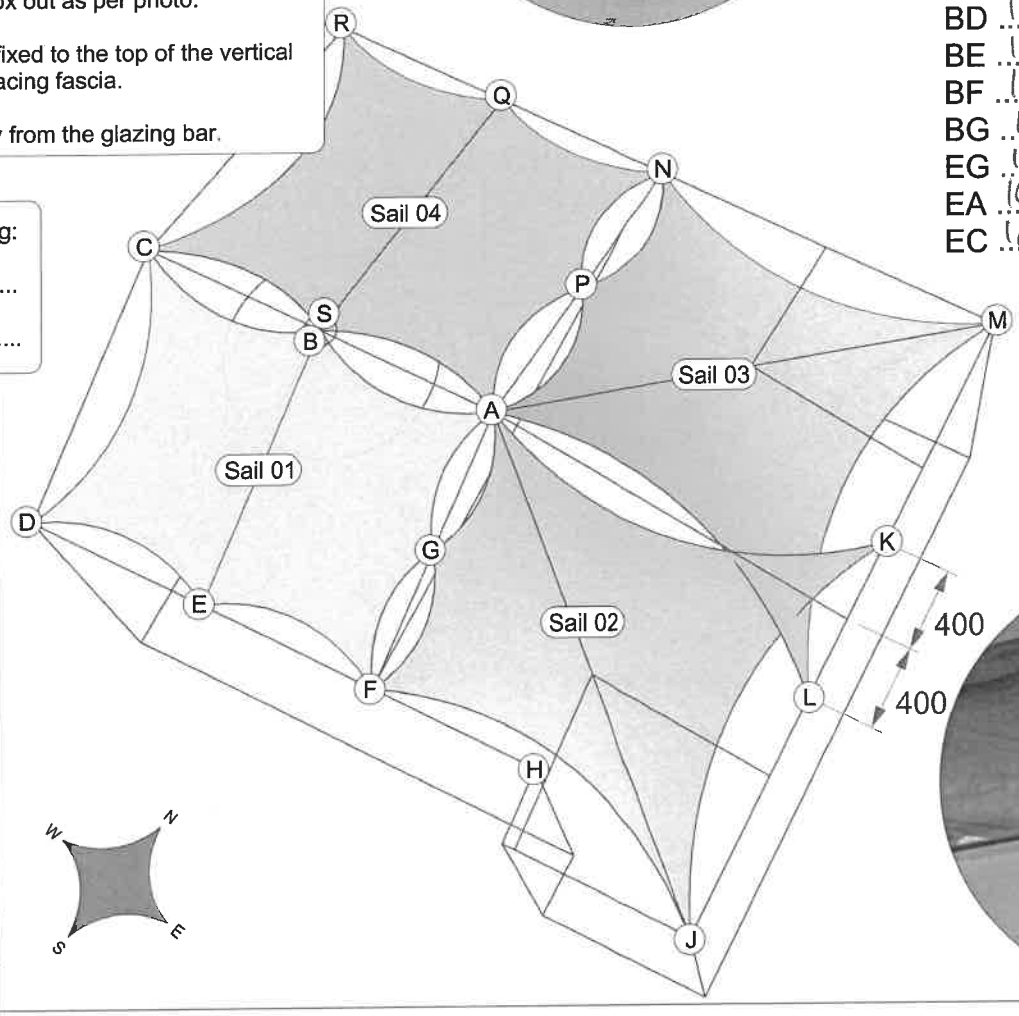

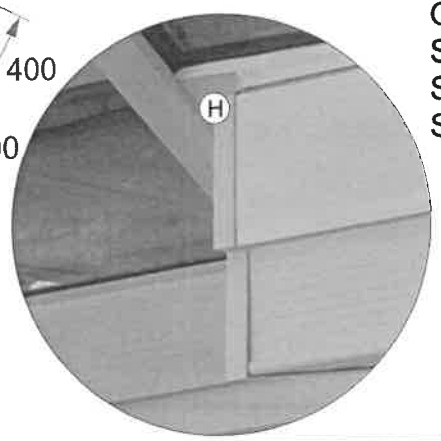

Notes:

Survey points to be taken from point on conservatory where eye plates are to be fixed.

MARK ALL POINTS BEFORE COMMENCING SURVEY

Dimensions should be taken as accurately as possible ideally +/-5mm

Any queries regarding this please contact us on 01786 450083

Design Shows:
4 x Made to Measure InShade Sails - ISX - TBC
(Sails are shown in Ivory for design clarity)

Obstructions: Box out, Fan & Tie-Bar

Special Fittings: Tie-Bar Clamp

Some sails may require a colour matched seam, this will be confirmed on receipt of final dimensions.

t : 01786 450083 | e : inshade@shadeplus.co.uk

Project:	72292-8927-Hewlett				
Date:	07.07.21	Drawn:	AB	Check:	PB

Required Dims :

Sail 01

AB	890
BC	930
CD	1350
DE	895
EF	900
FG	630
GA	695
BD	1580
BE	1275
BF	1530
BG	1080
EG	1120
EA	1620
EC	1610

Sail 02

AG	695
GF	630
FH	865
HJ	1025
JK	1960
KA	1930
AH	1590
AJ	2450
GH	1070
GJ	2070
GK	2140
FK	2465
HK	1930

Sail 03

AL	1935
LM	1940
MN	1785
NP	830
PA	890
MP	1955
MA	2430
LN	2670
LP	2200

Sail 04

AP	850
PN	830
NQ	910
QR	860
RC	1730
CS	925
SA	890
QC	1960
QS	1645
QA	1920
QP	1235
SP	1210
SN	1880
SR	1855