

Custom Sail Survey - Option 01

Required Dims :


Sail 01 AB 1695	Sail 02 AE 1990	Sail 03 HL 1695	Sail 04 HM 1700	Sail 05 AS 1985	Tie-Bars AW 1670
BC 2000	EF 1650	LK 2000	NM 2000	SR 1655	EW 845
CD 1655	FG 1660	KJ 1655	NP 1665	RQ 1650	FW 845
DA 1850	GH 1990	JH 1850	PH 1850	QH 1990	
BD 2060	HA 1840	HK 2355	HN 2355	HA 1840	HX 1680
AC 2360	AF 2060	LJ 2660	PM 2665	AR 2065	GX 840
	AG 3165			AQ 3165	FX 865
	HF 2070			HR 2060	HY 1670
	HE 3170			HS 3160	QY 845
				RY 845	
				Sail 06 AV 1700	AZ 1665
				VU 2000	SZ 840
				UT 1655	RZ 860
				TA 1845	
				AU 2350	
				TV 2660	

SURVEY CHECKLIST: ****to be completed on site****

- 8mm Capping Piece to be fitted at point A/H, AFTER survey confirm suitability by taking off capping cover and take photo's.
- All lower fitting points should be fixed to the top of the vertical fascia - this is to help sails 02/05 avoid tie-bar struts.
- Corner points U/C/K/N to be on the short side fascia (same side as B/V/M/L).
- Sail 05 to have the access hole marked on-site during installation. The sail will then be returned to us to add an access hole and can be sent directly to client to just clip it up.
- Points B/V/M/L to be set at 330mm away from the glazing bar.
- Points E/G/Q/S to be set at 820mm away from points D/J/P/T or in-line with glazing bars if difference is less than 30mm.

Confirmation required for the following:

- Colour of Fabric
- Colour of Fittings
(Please note white & gold fittings carry a surcharge of £2+VAT per sail corner.)

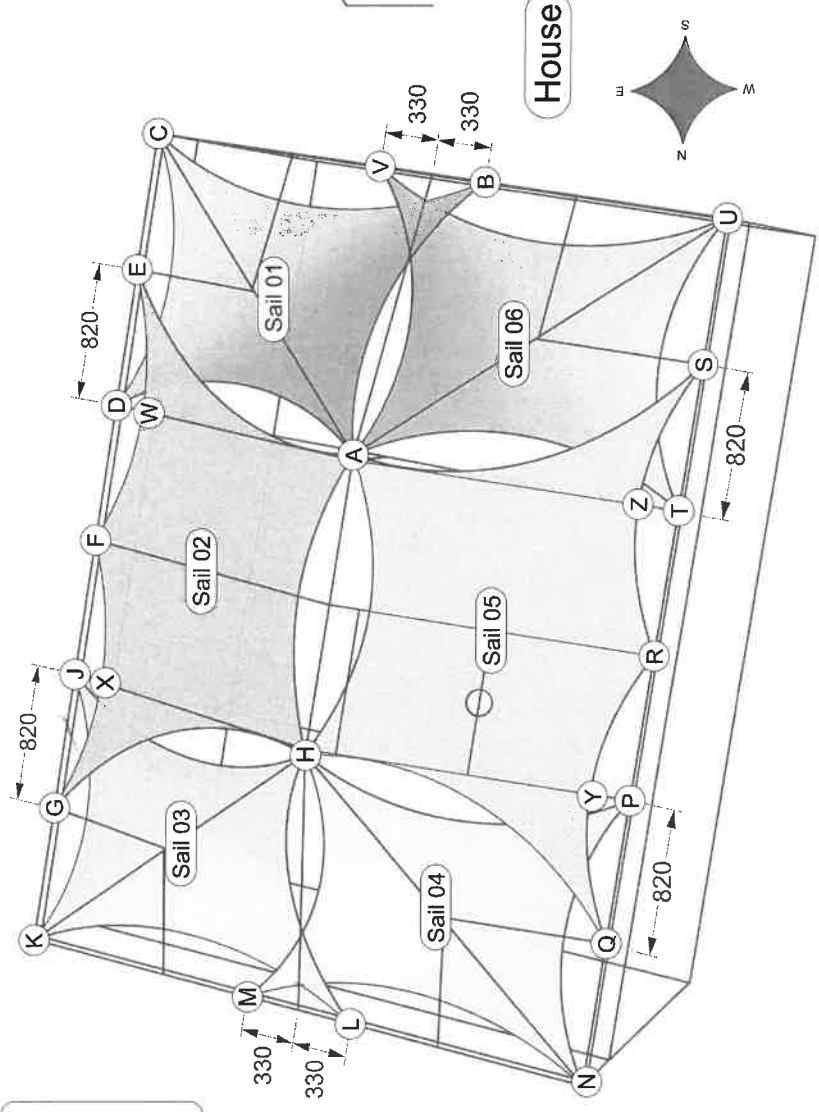

Notes:			
Survey points to be taken from point on conservatory where eye plates are to be fixed.			
MARK ALL POINTS BEFORE COMMENCING SURVEY			
Dimensions should be taken as accurately as possible ideally +/-5mm			
Design Shows: 6 x Made to Measure InShade Sails - ISX - TBC (Sails are shown in Ivory for design clarity)			
Obstructions: Opener & Tie-Bars			
Special Fittings: 2 x MB CPF			
t : 01786 450083		e : inshade@shadeplus.co.uk	
Project: 72292-96689-Nidiah			
Date: 14.03.23	Drawn: AB	Check: --	

